

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

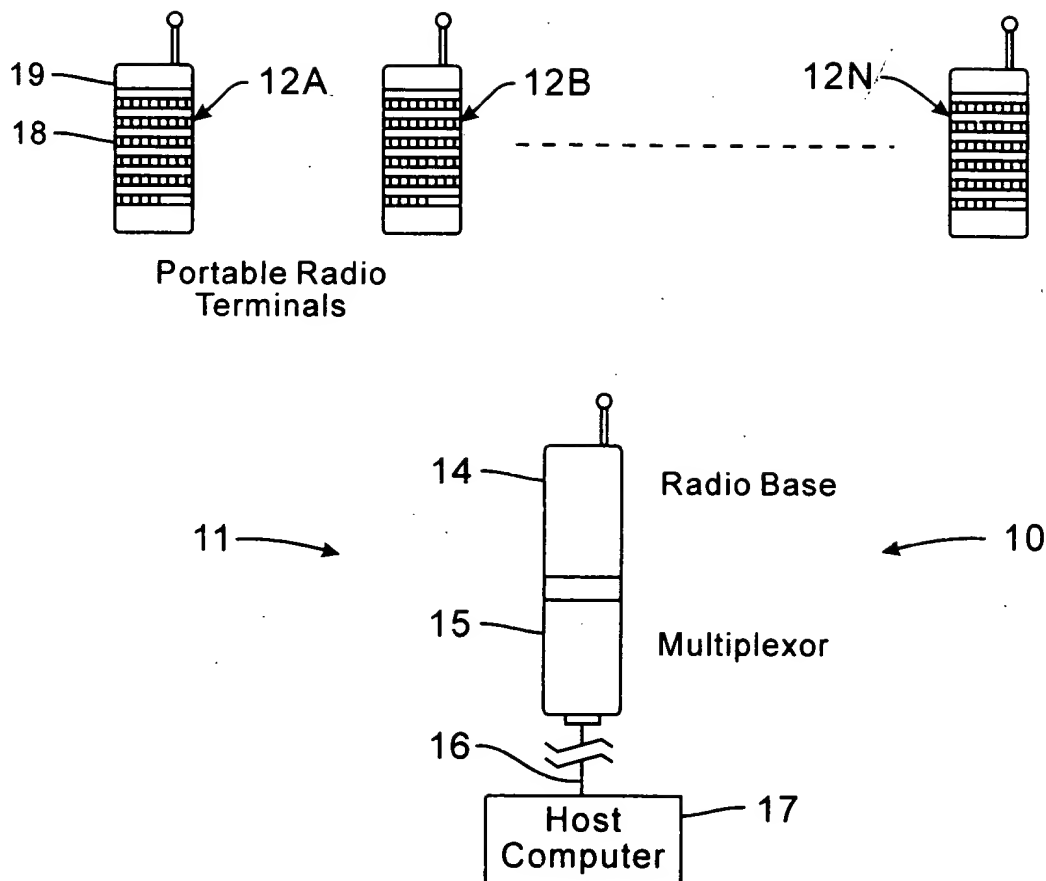 


Fig. 1
(Prior Art)

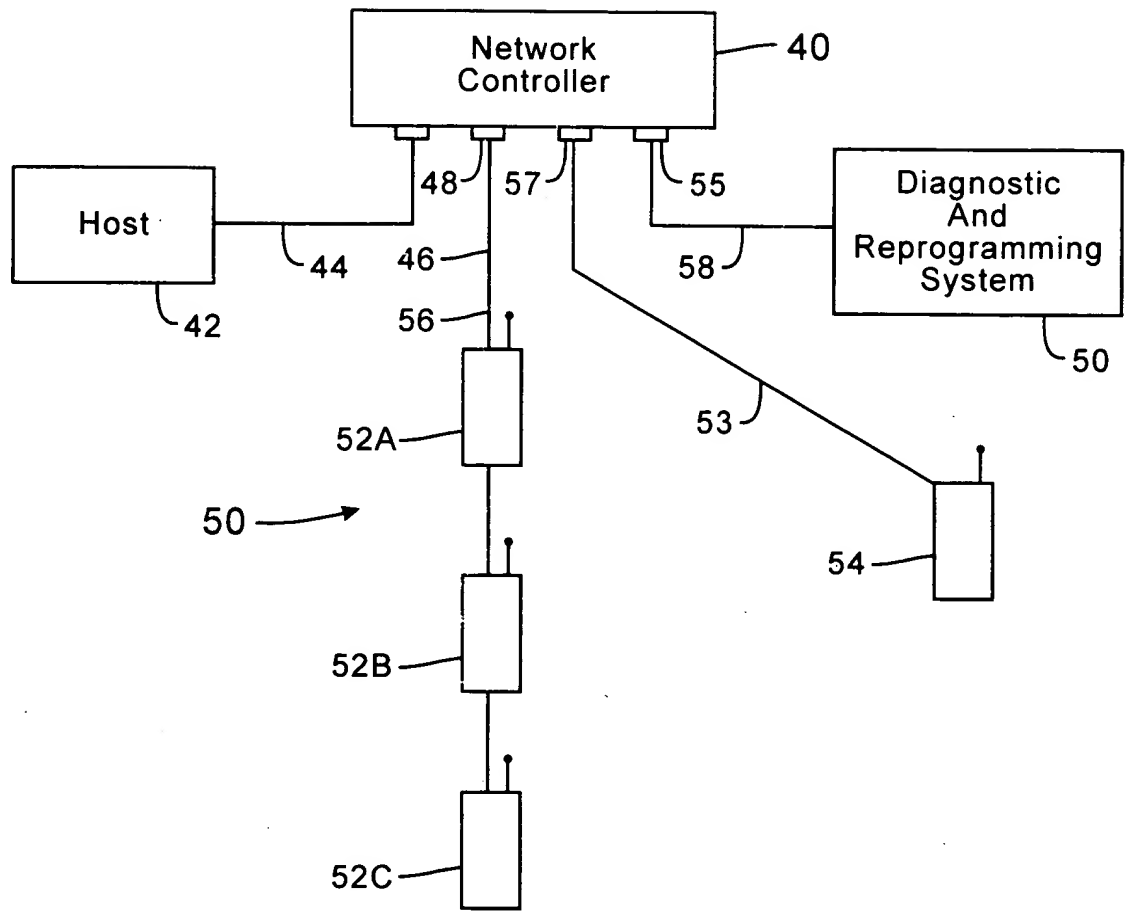 


Fig. 3

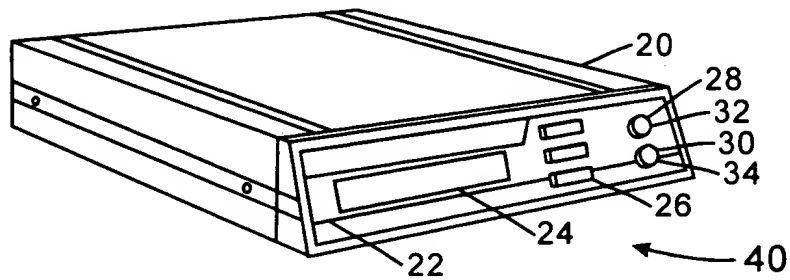 


Fig. 2

65250" 89987E60

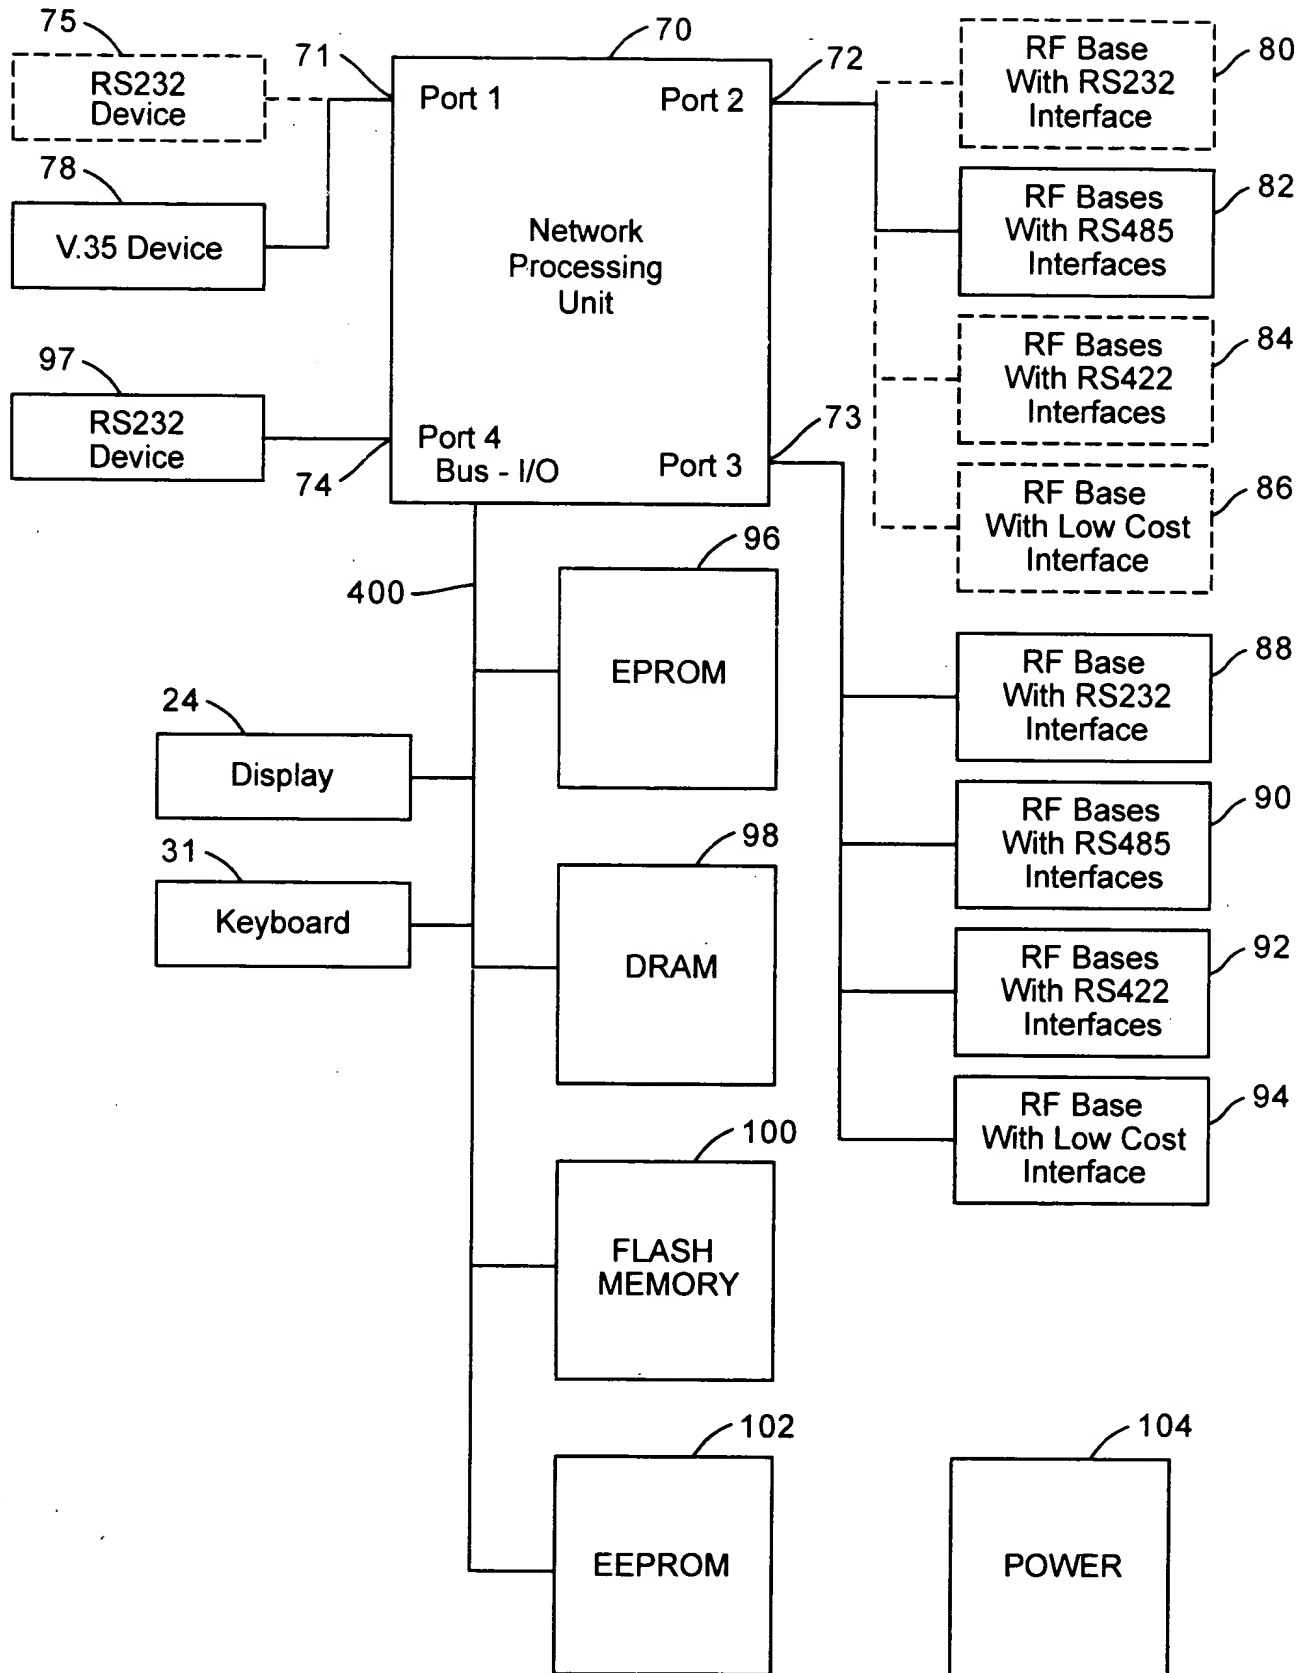 


Fig. 4

155250" 89987E60

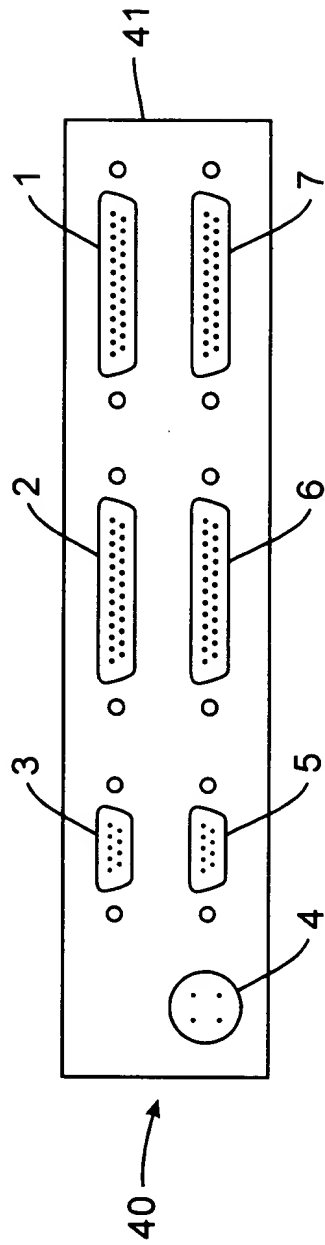 


Fig. 5

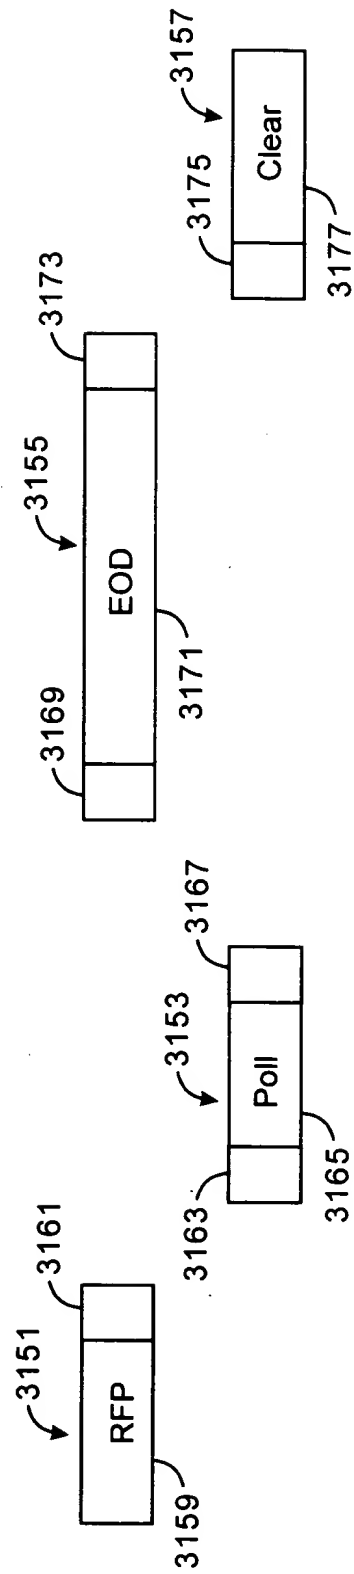 


Fig. 20

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

665250" 89987E60

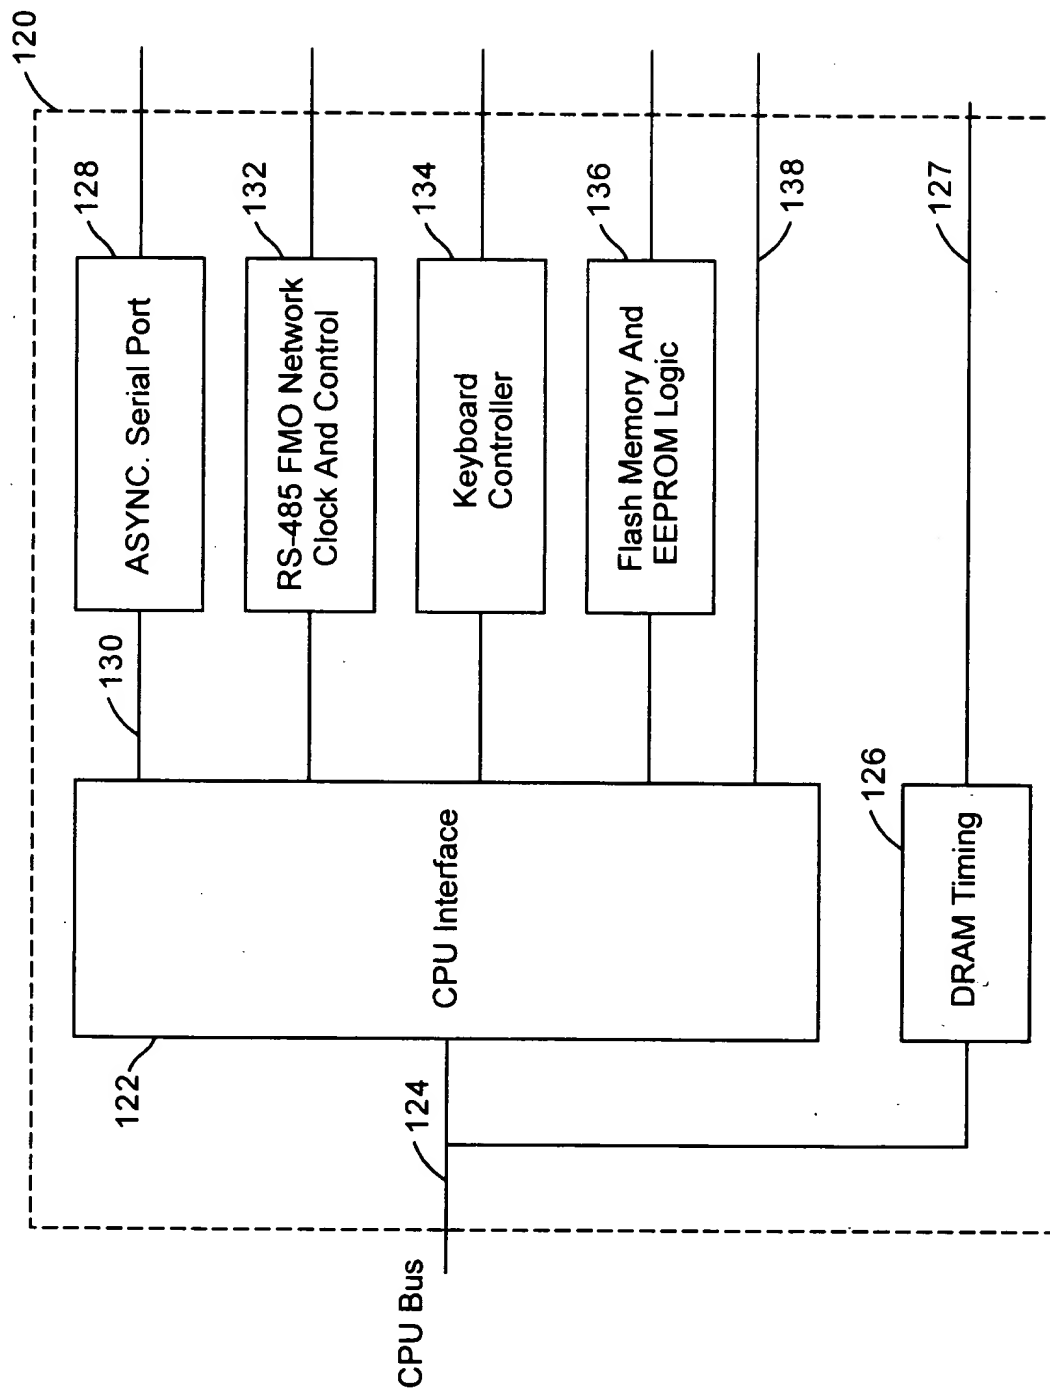 


Fig.6

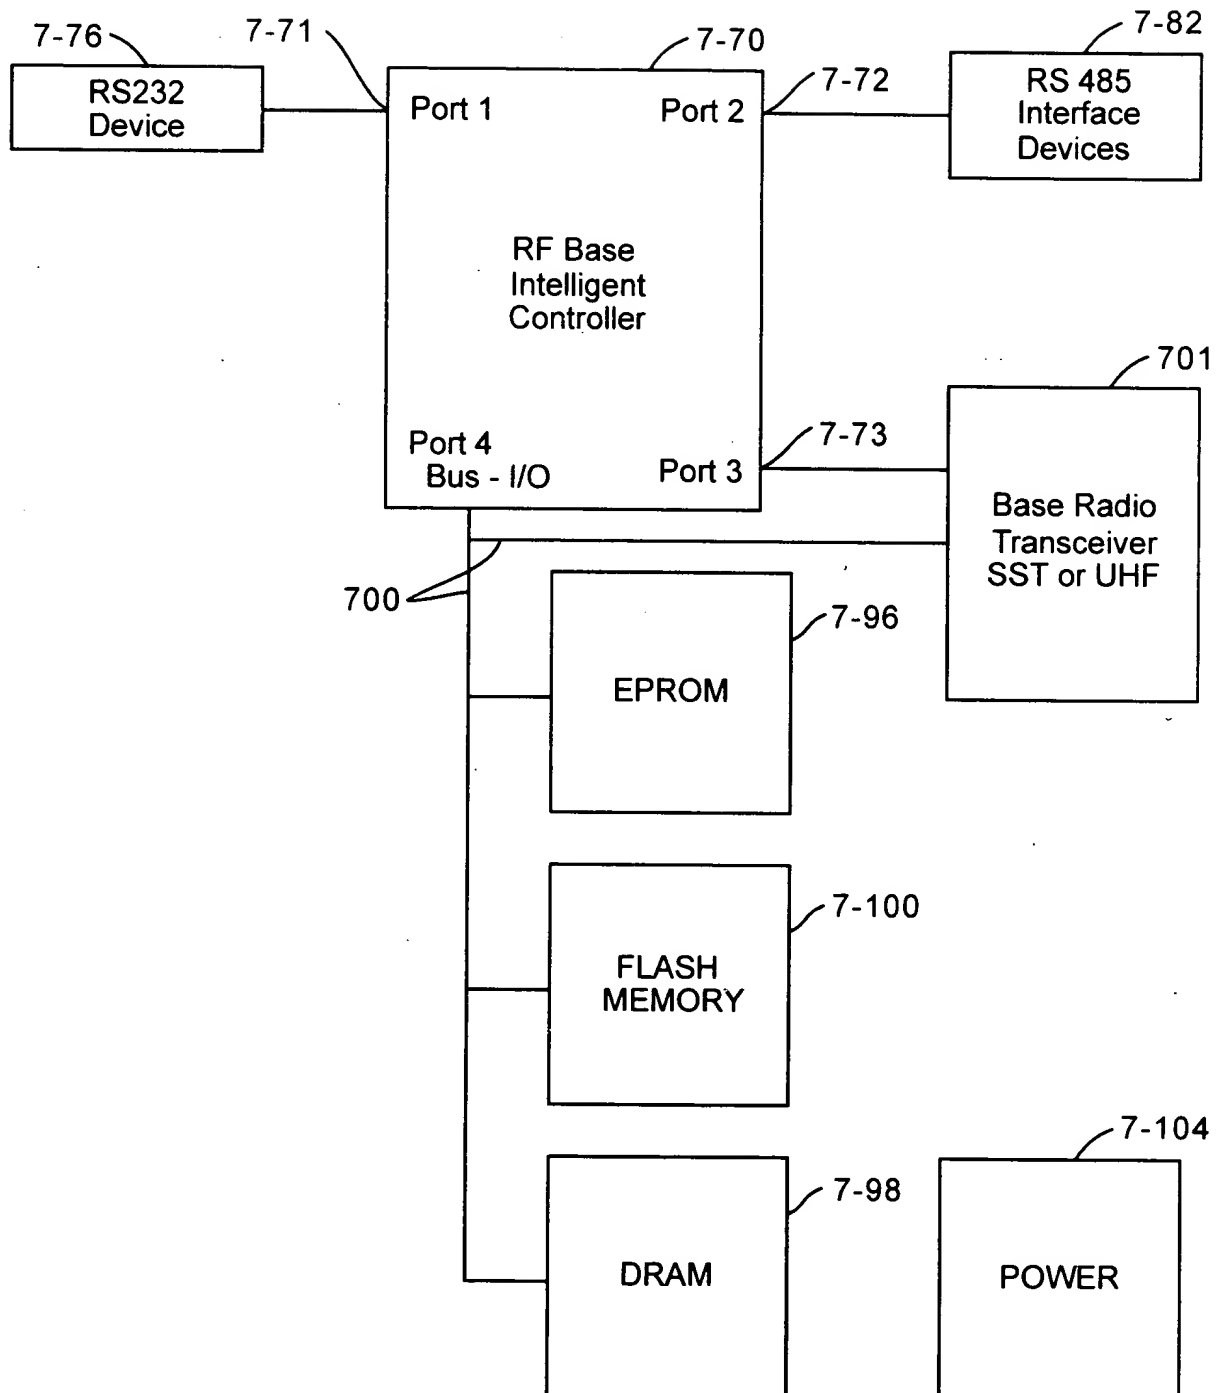 


Fig. 7

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

665250" 89981E60

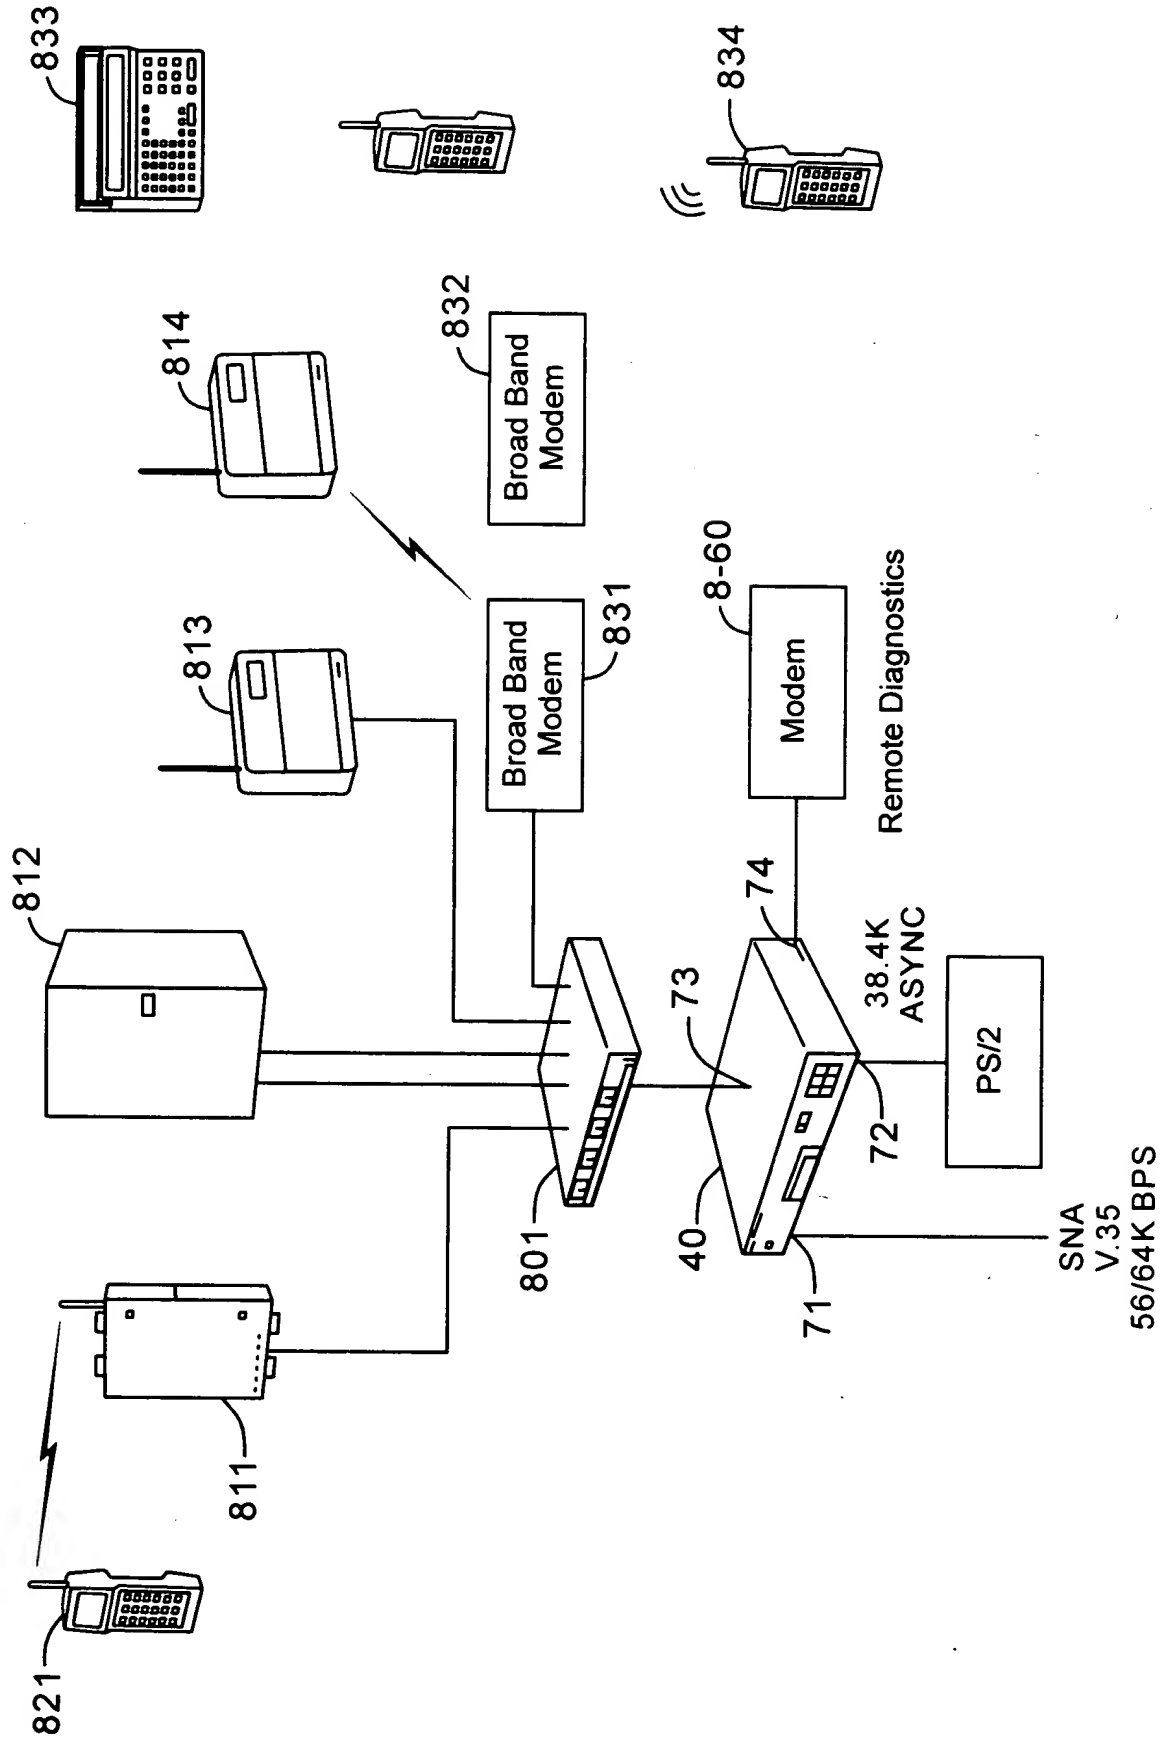 


Fig.8

65250" 8998TE60

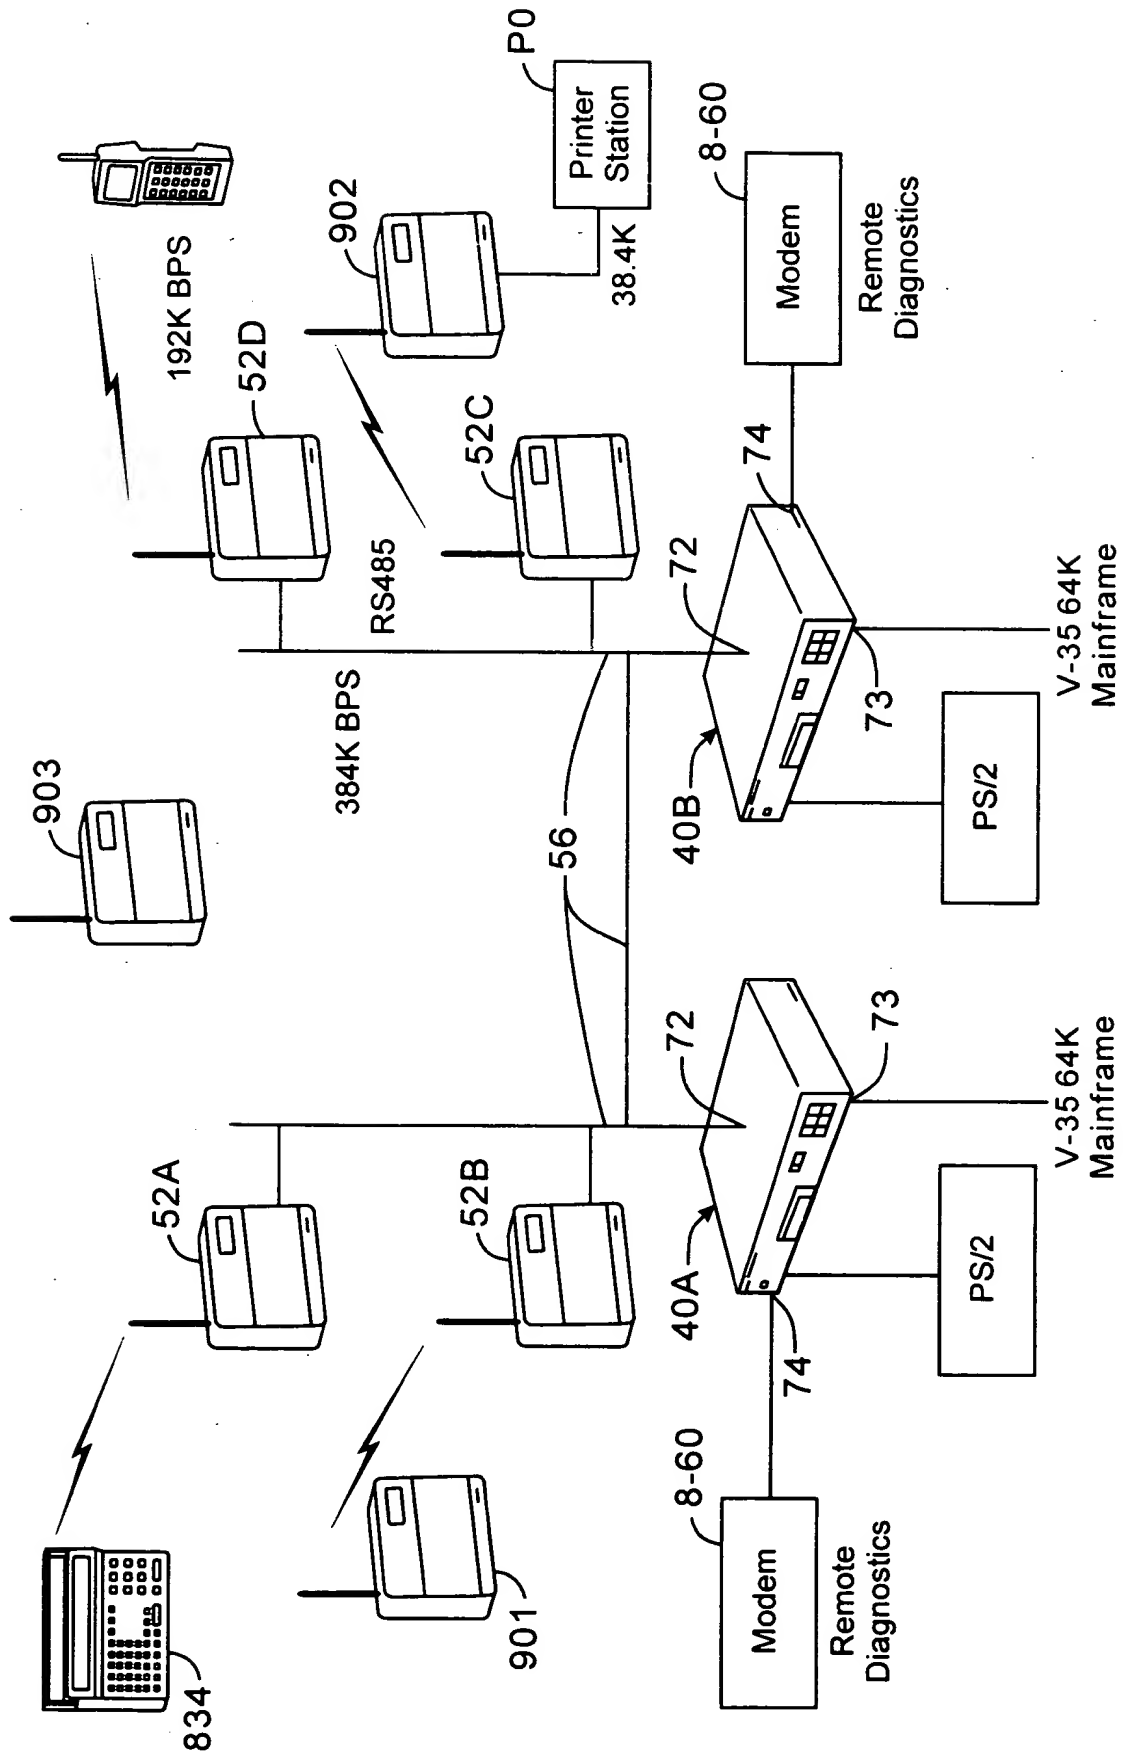 


Fig.9

565250" 89987E60

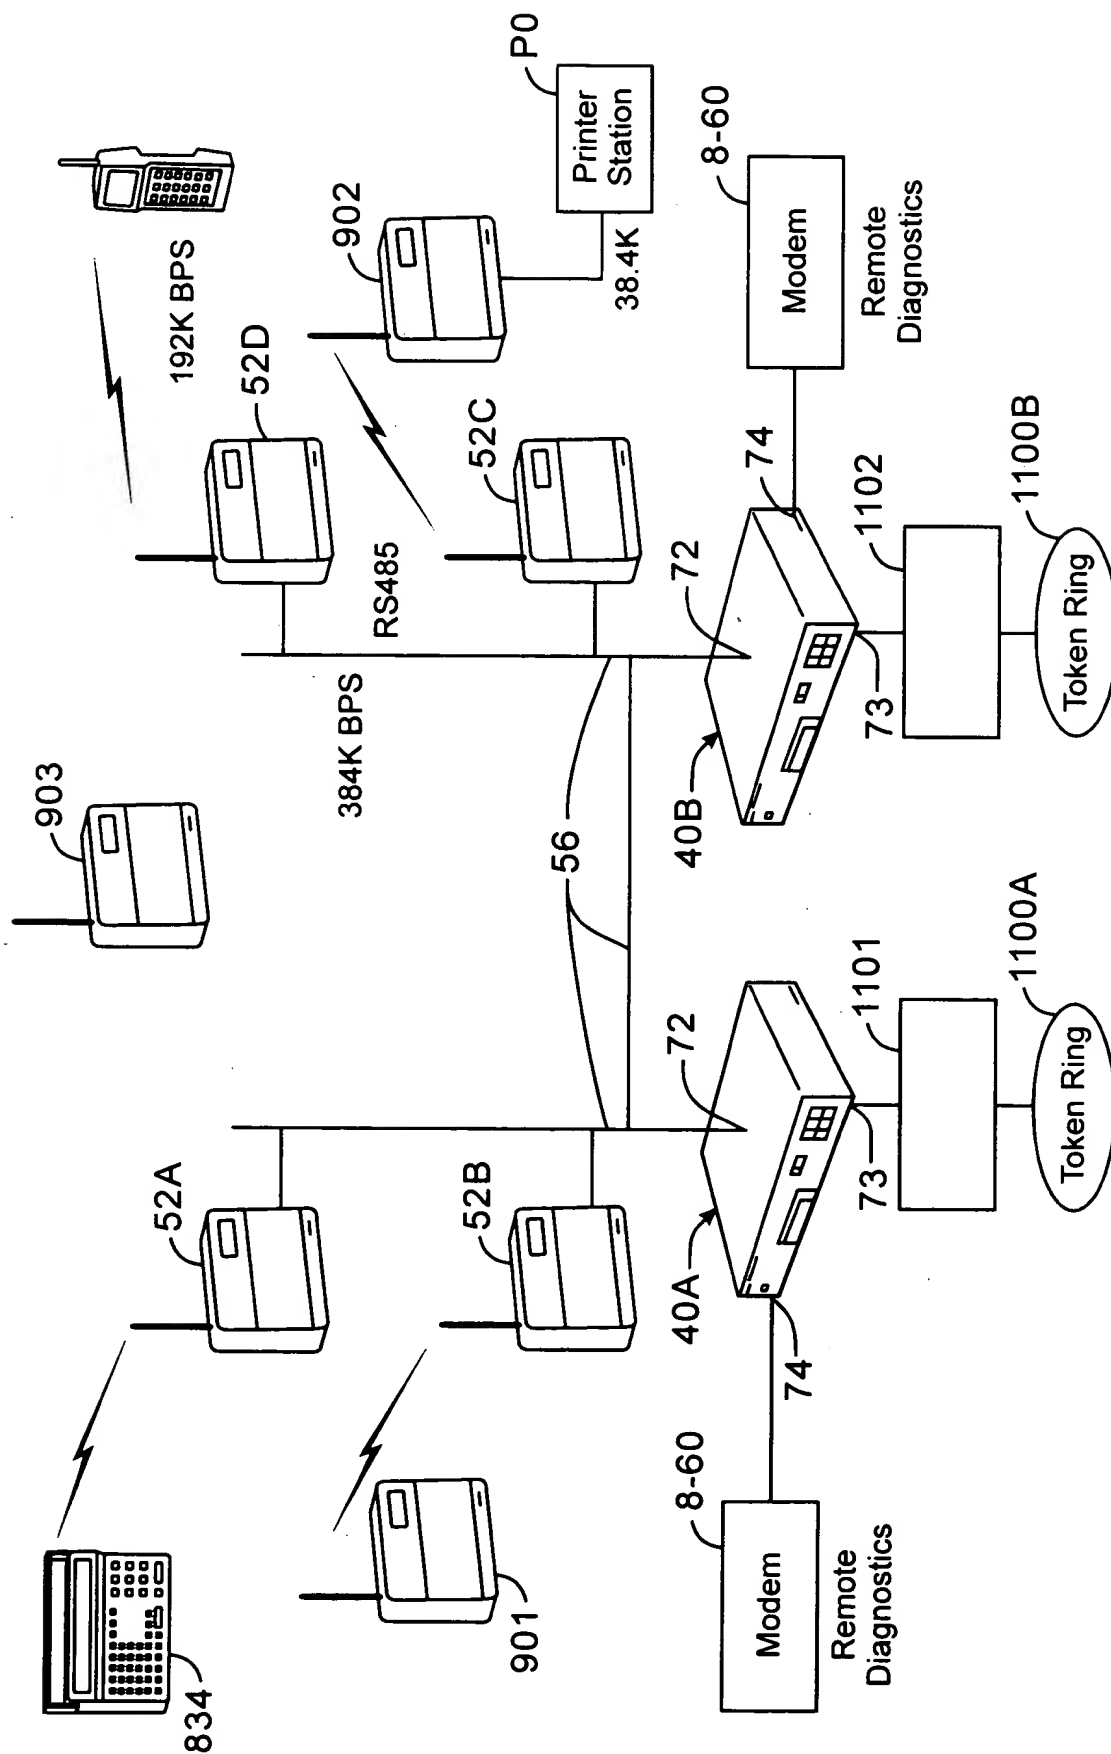 


Fig.11

665250" 89987E60

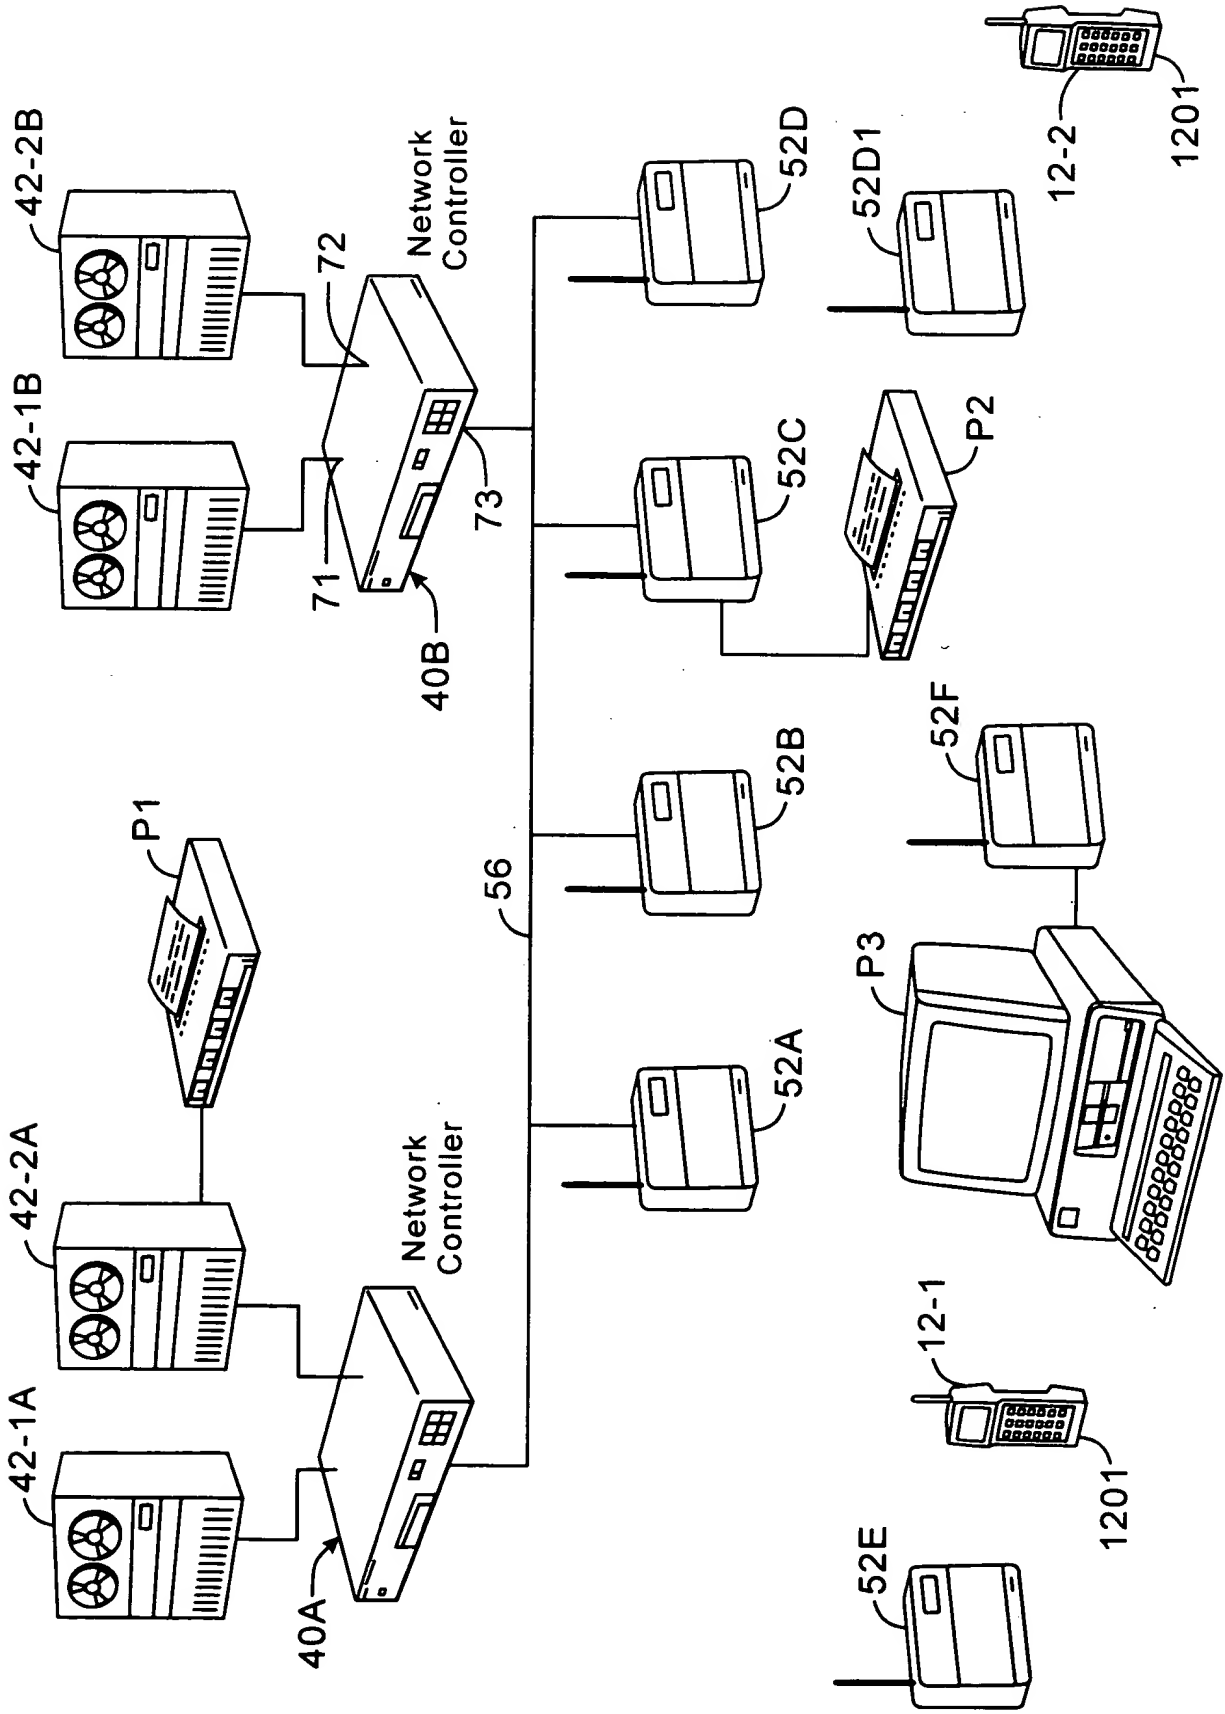 


Fig.12

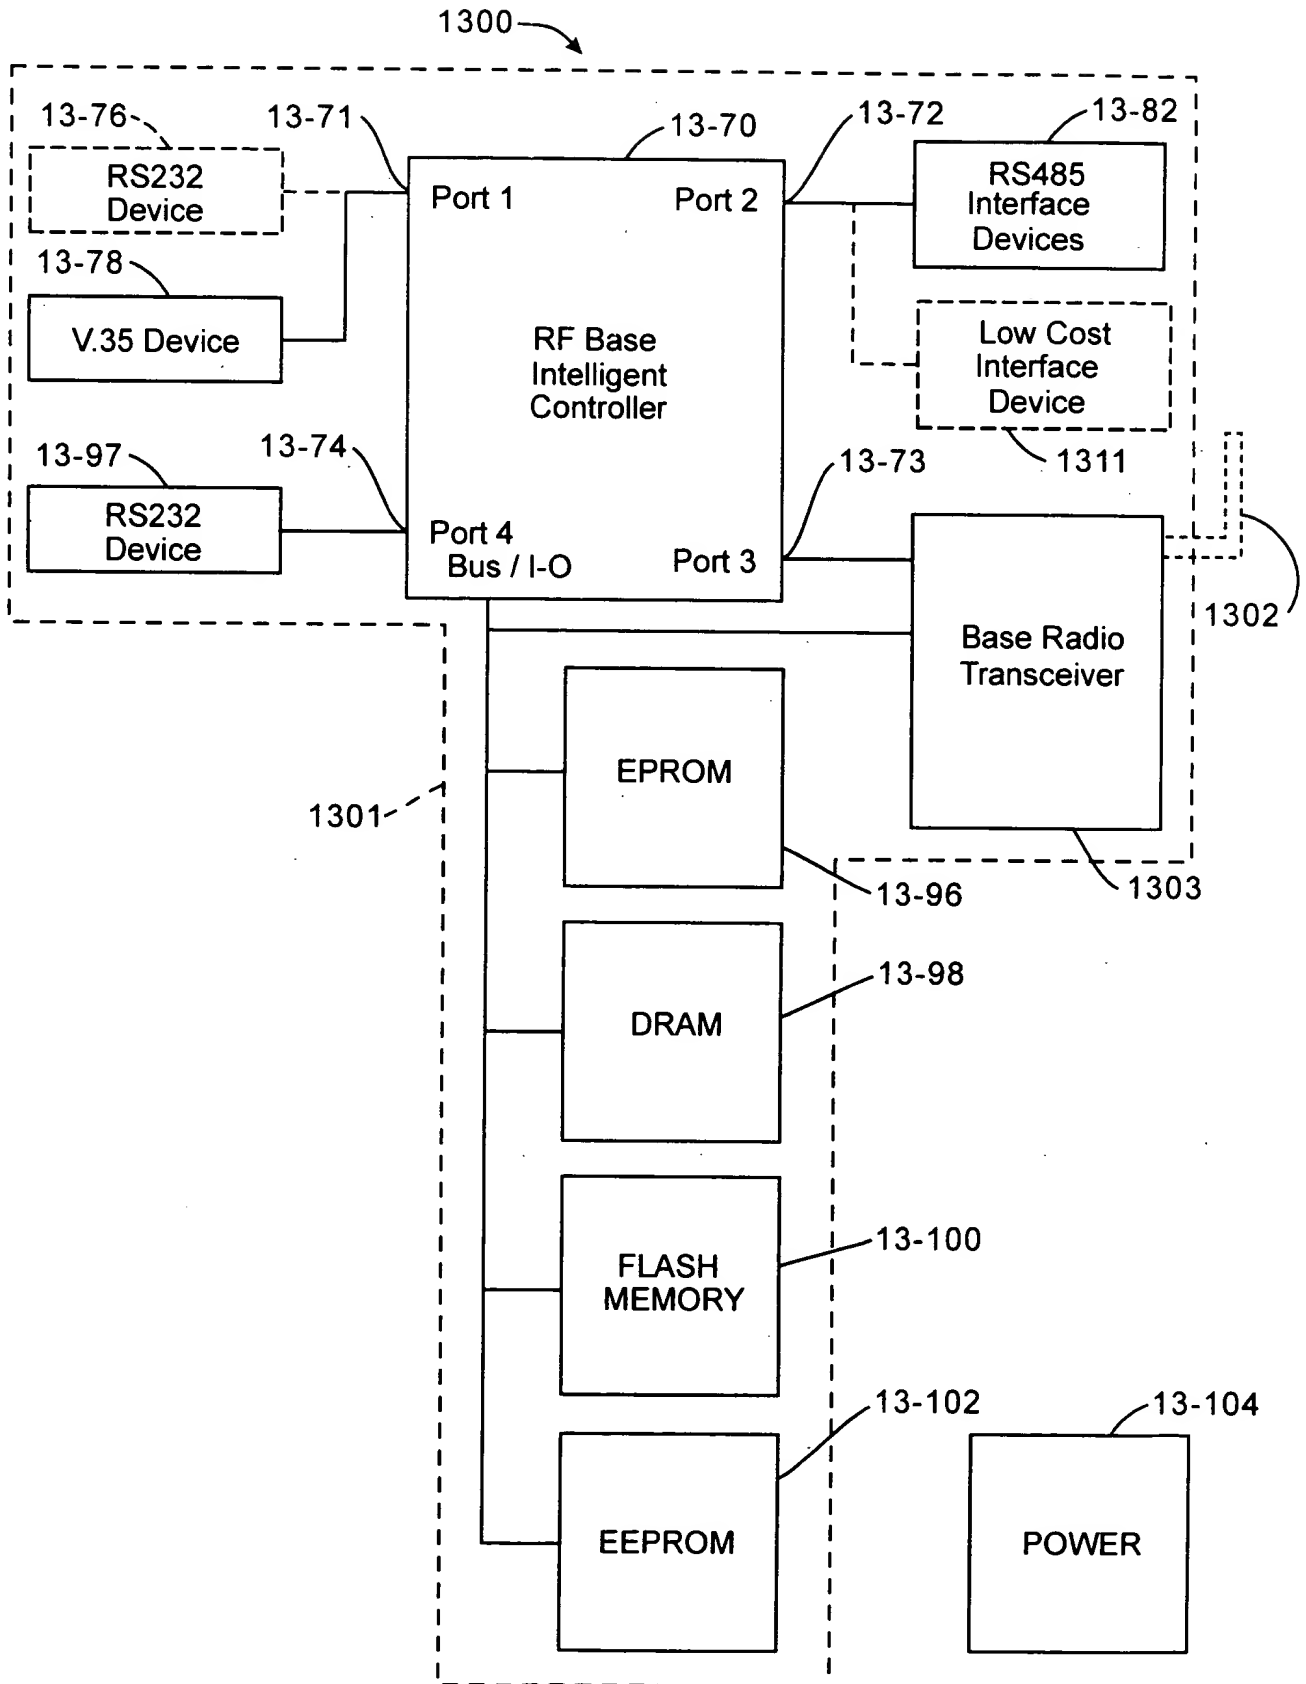 


Fig. 13

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

65250-8987E60

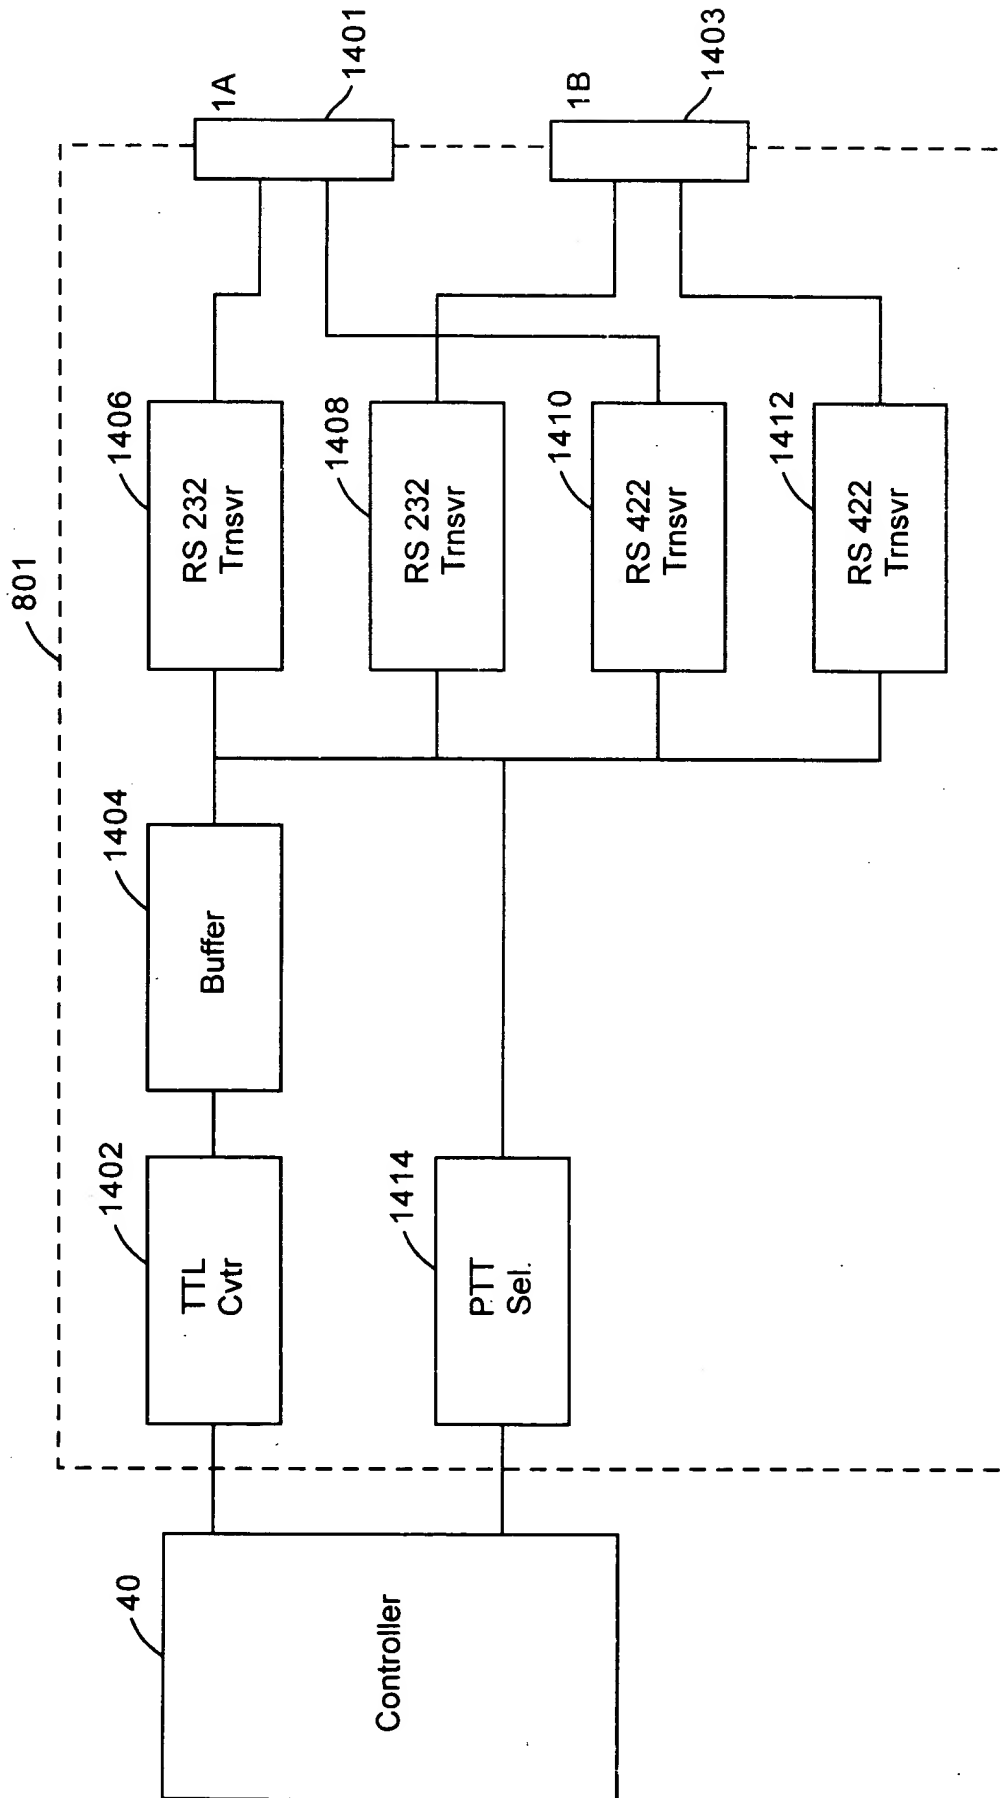 


Fig.14

MBA3000 Multiple Base Adapter

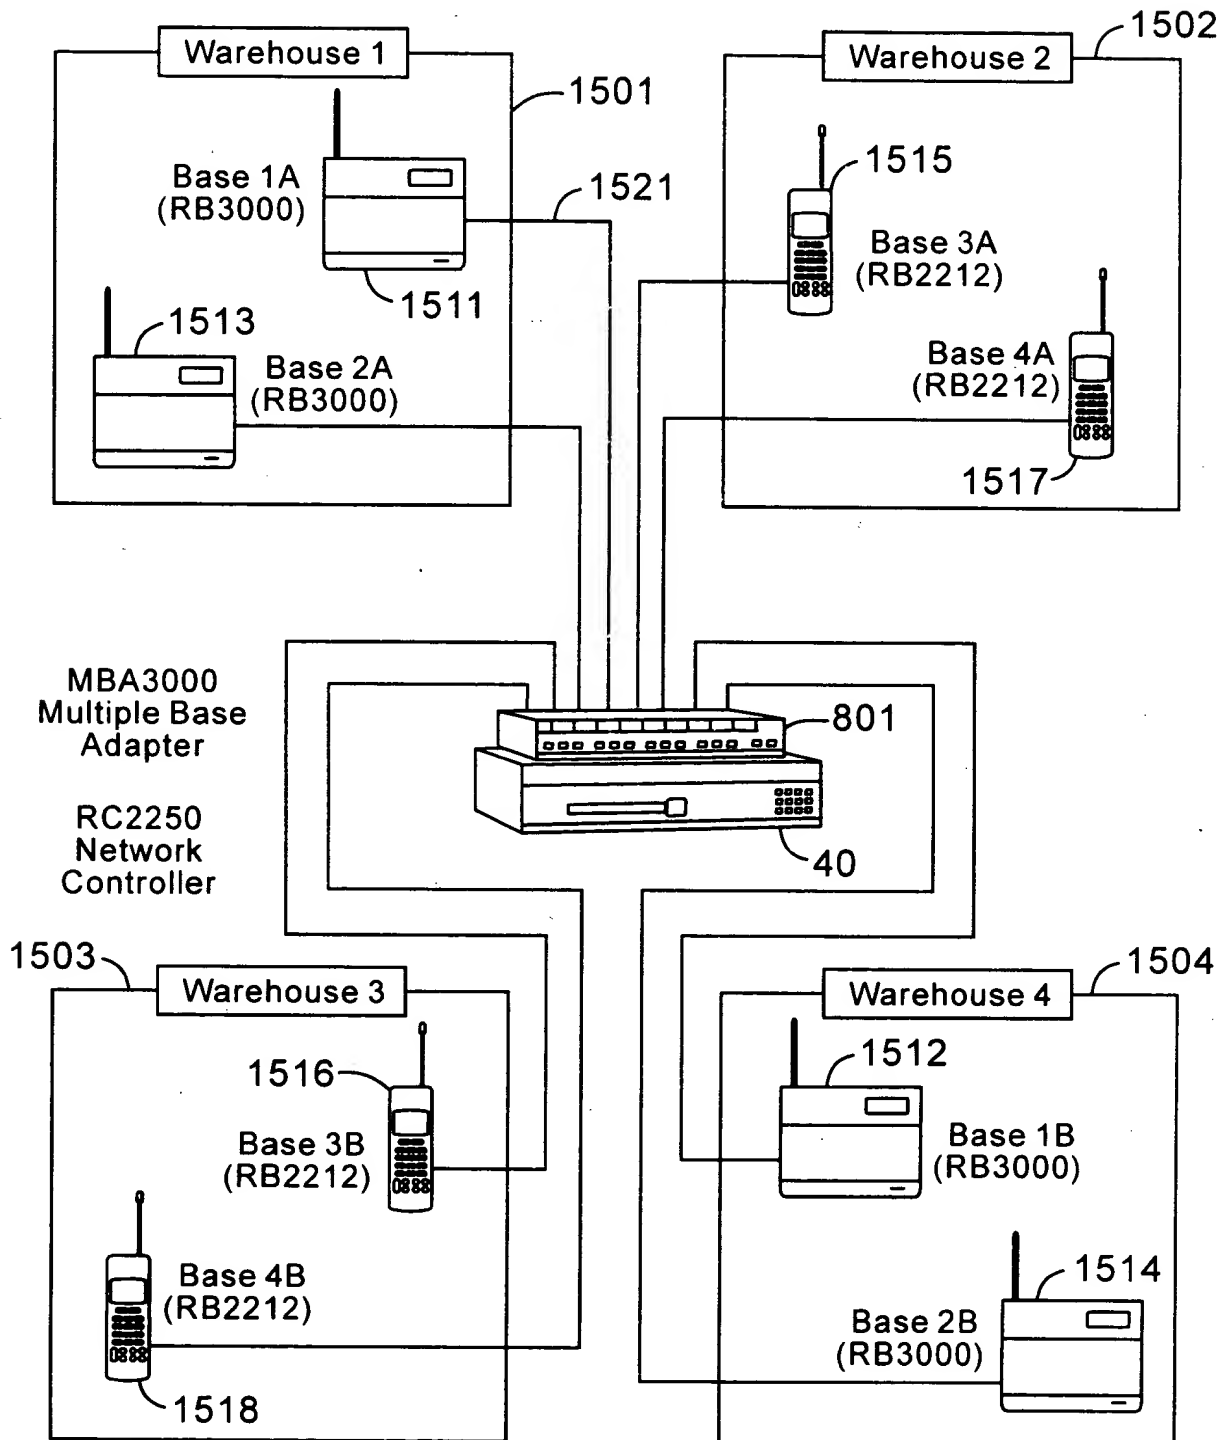 


Fig. 15

665250" 89987660

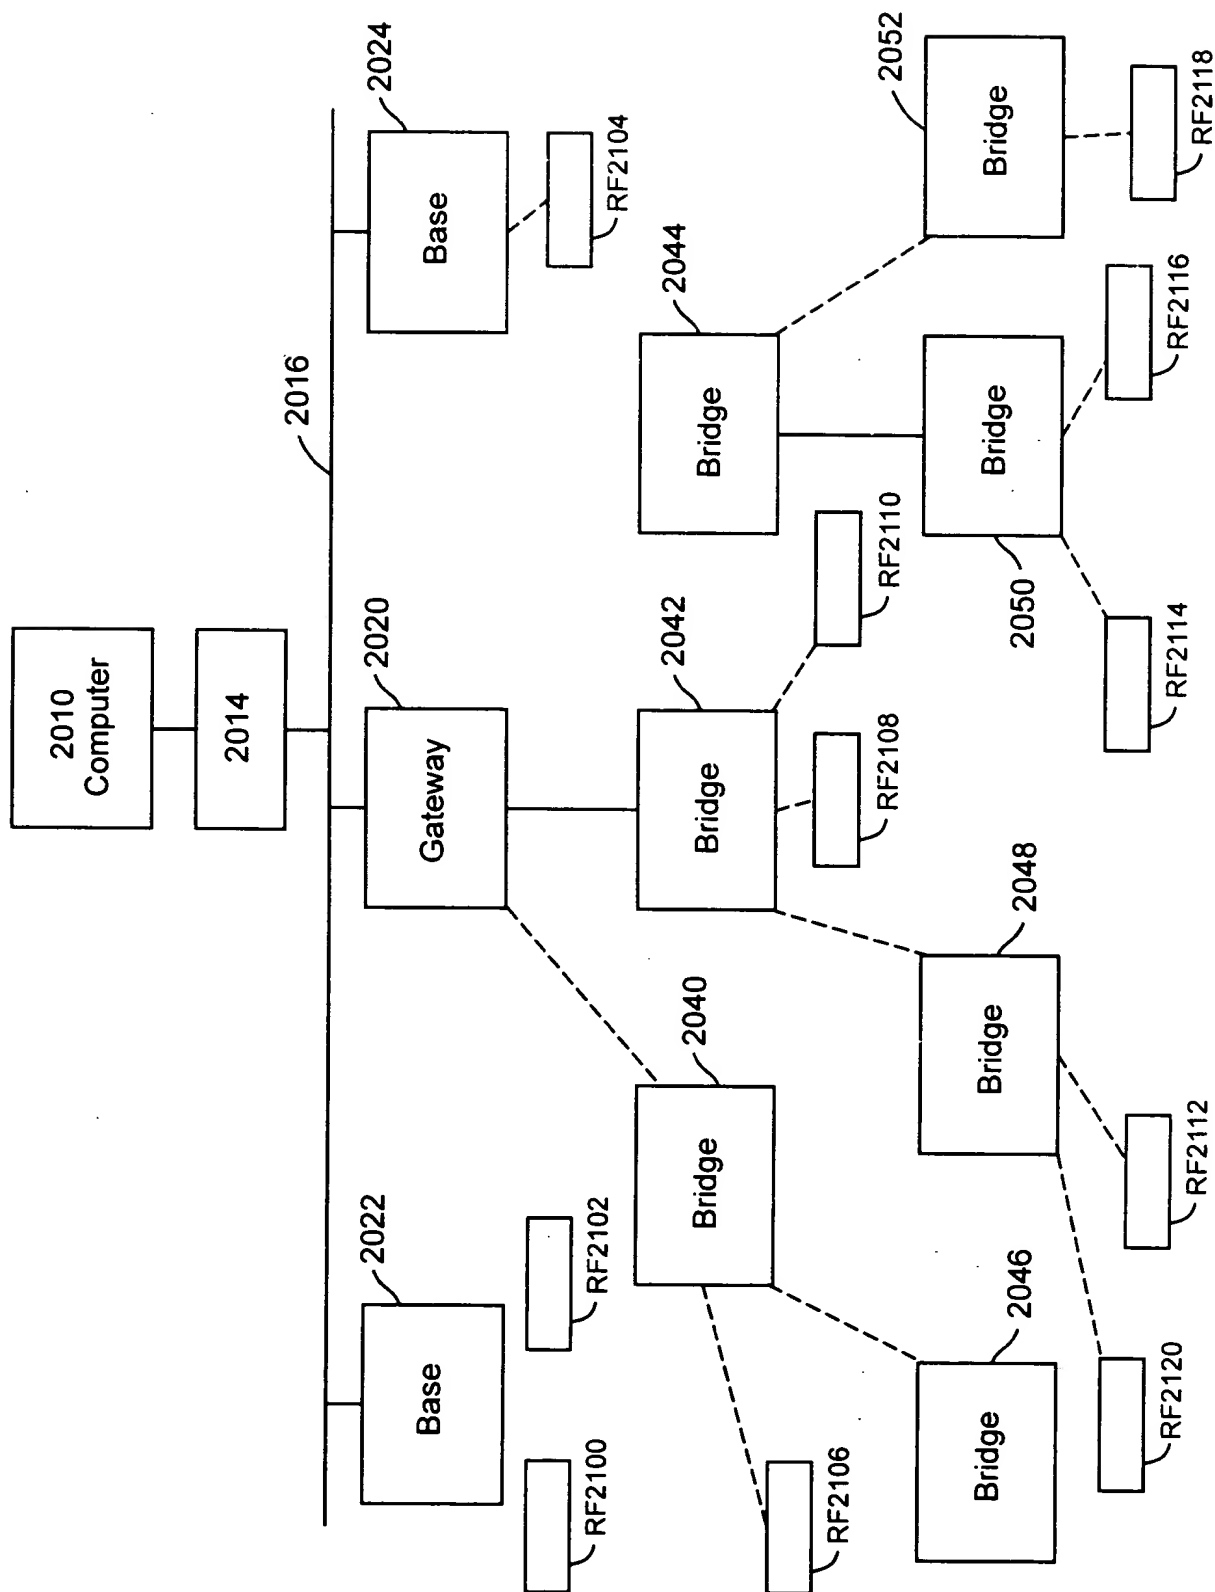 


Fig.16

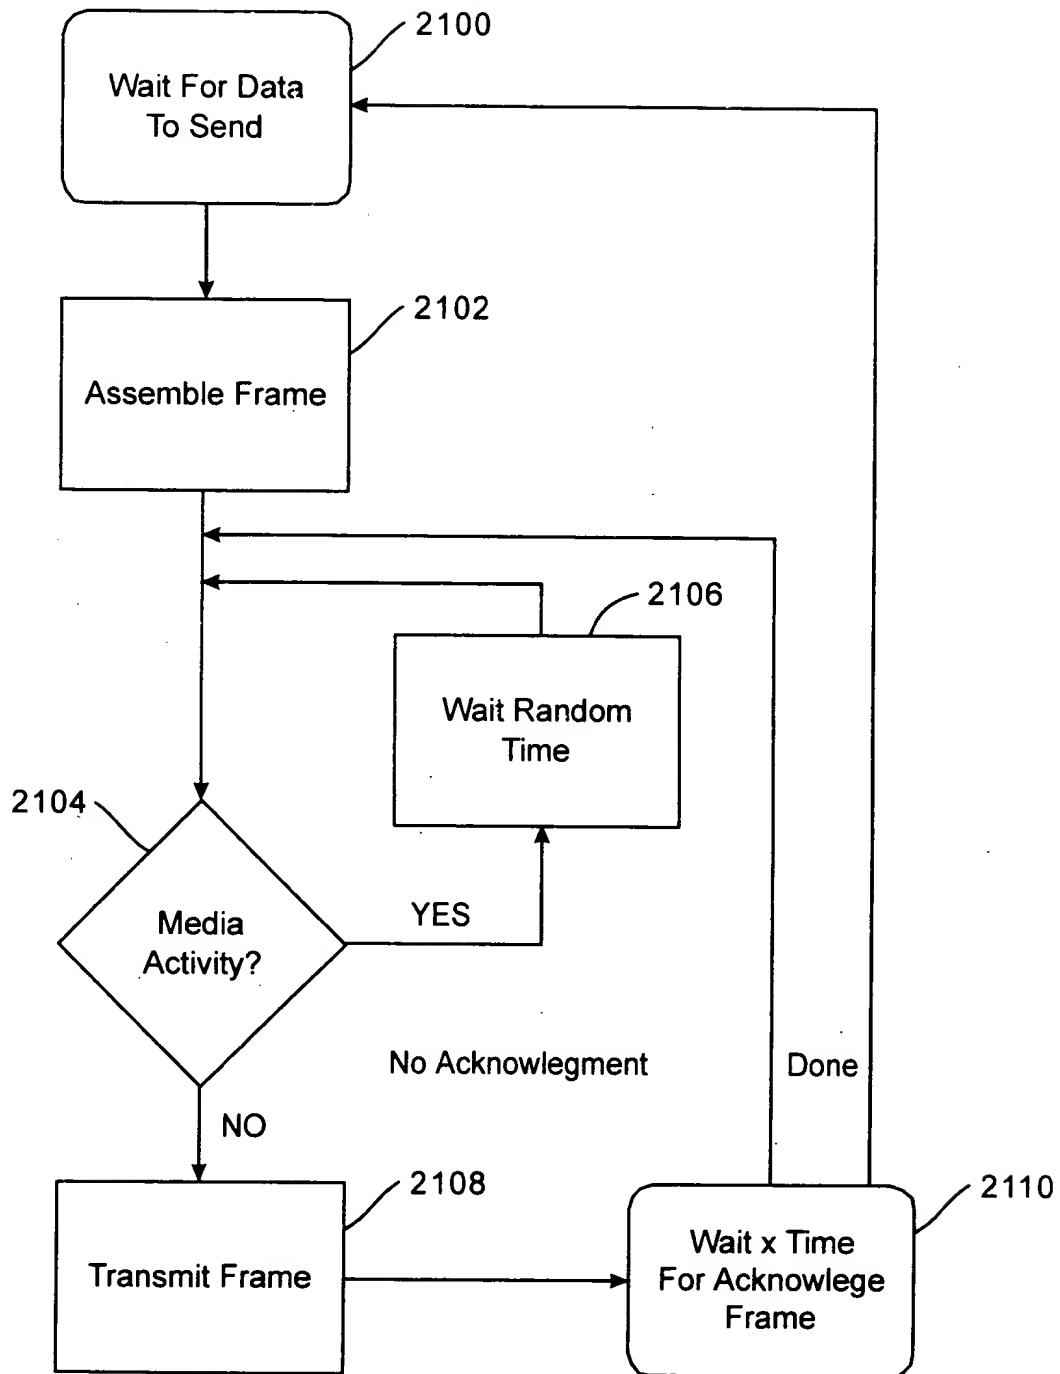 


Fig. 17

65250" 29987E50

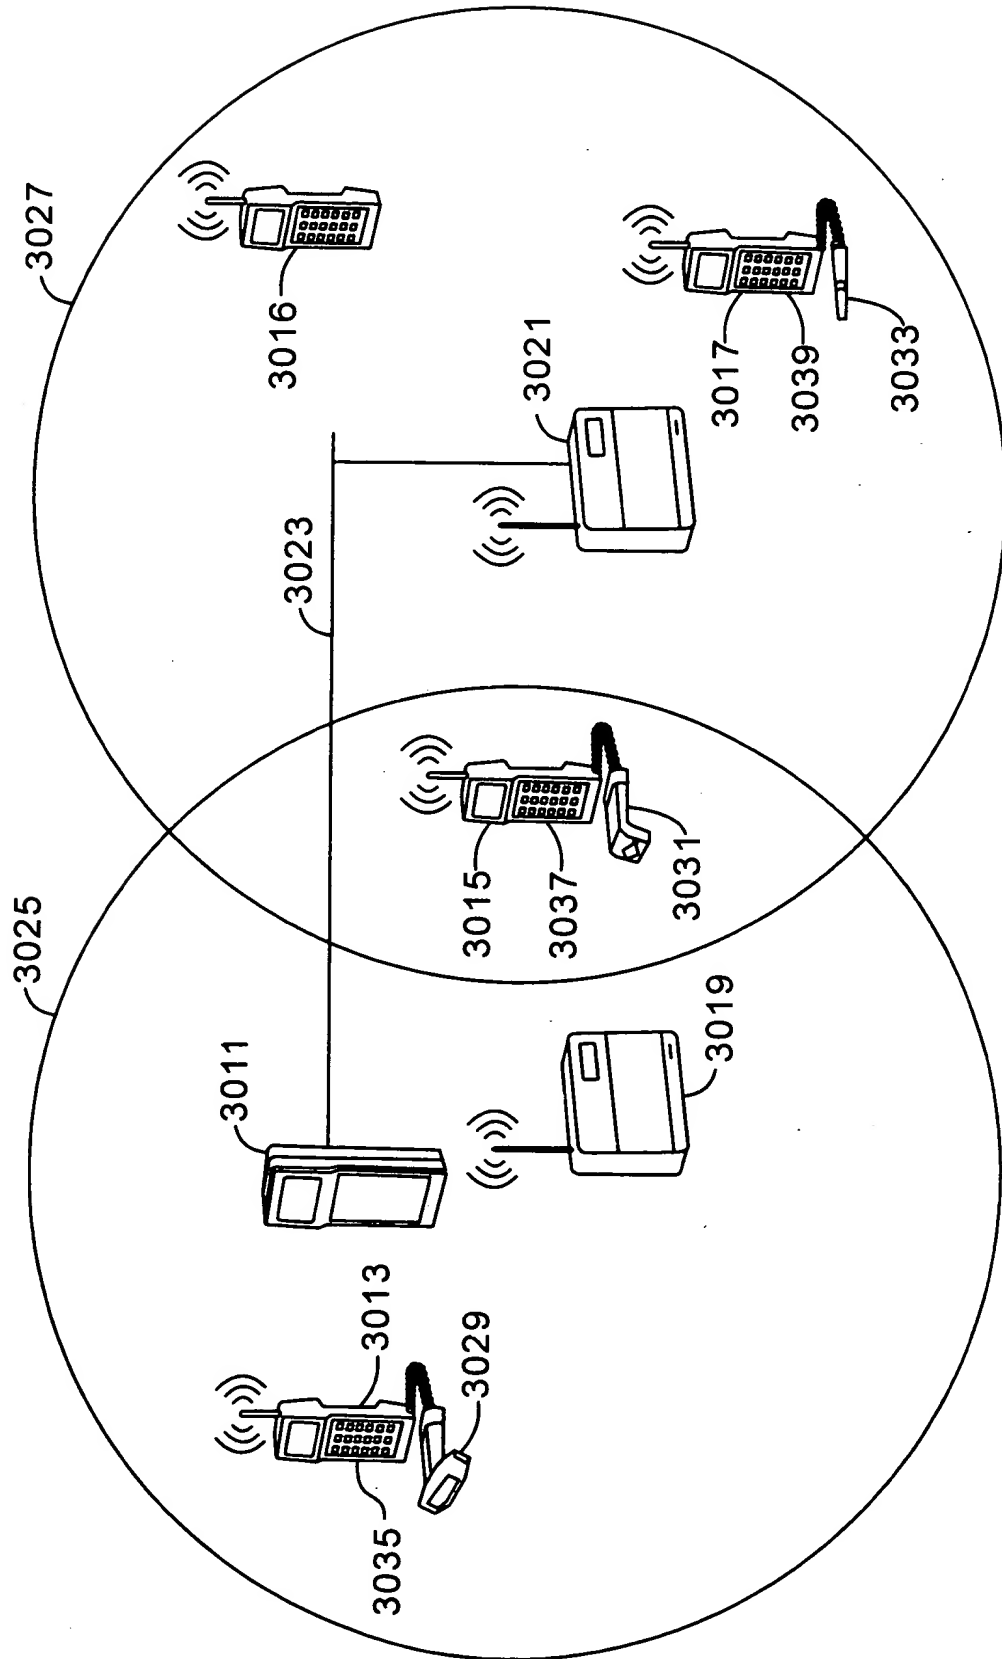 


Fig.18

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

65250" 398TE50

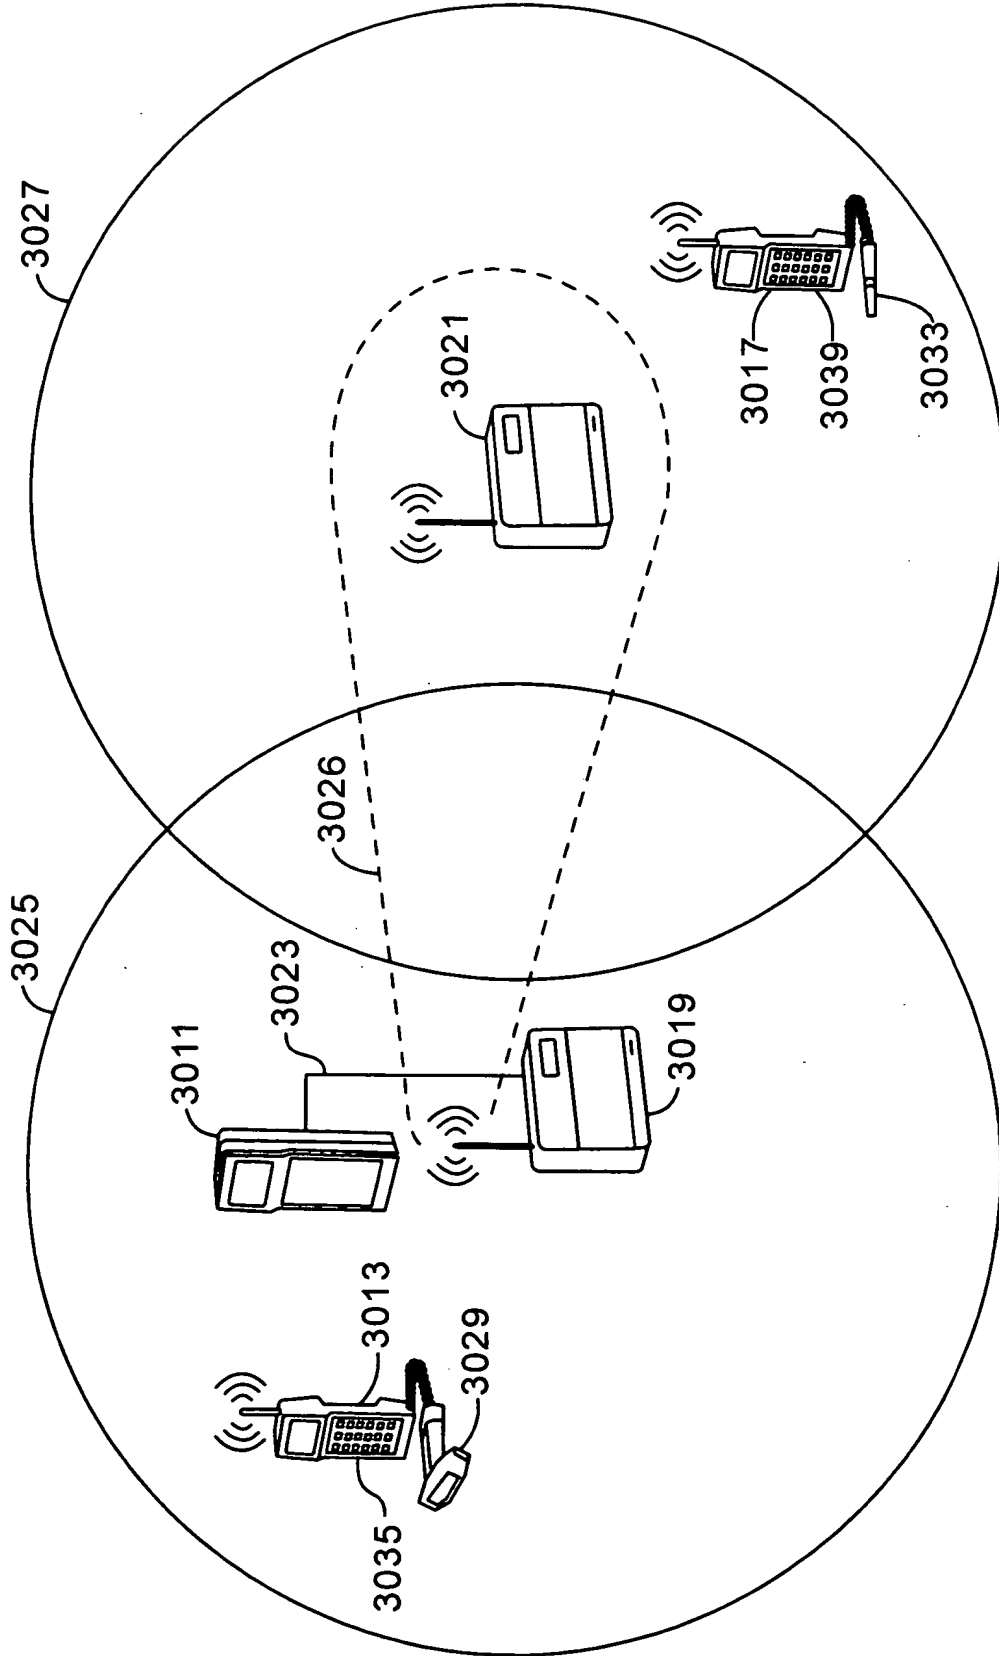 


Fig.18A

665250" 89987E60

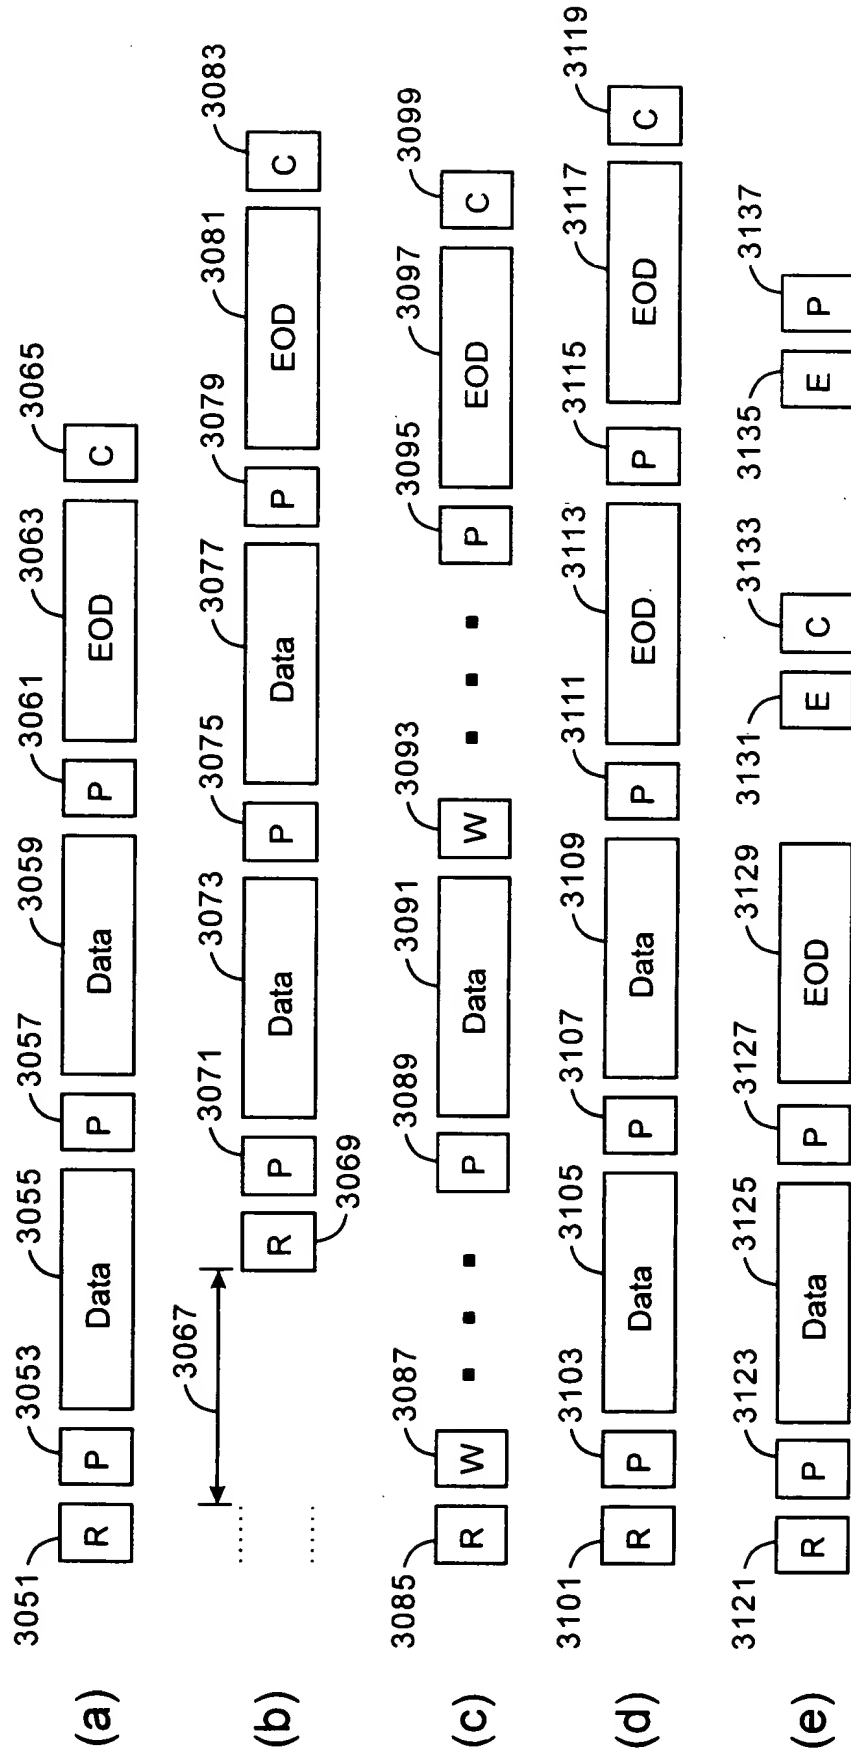 


Fig.19

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

665250-3987E60

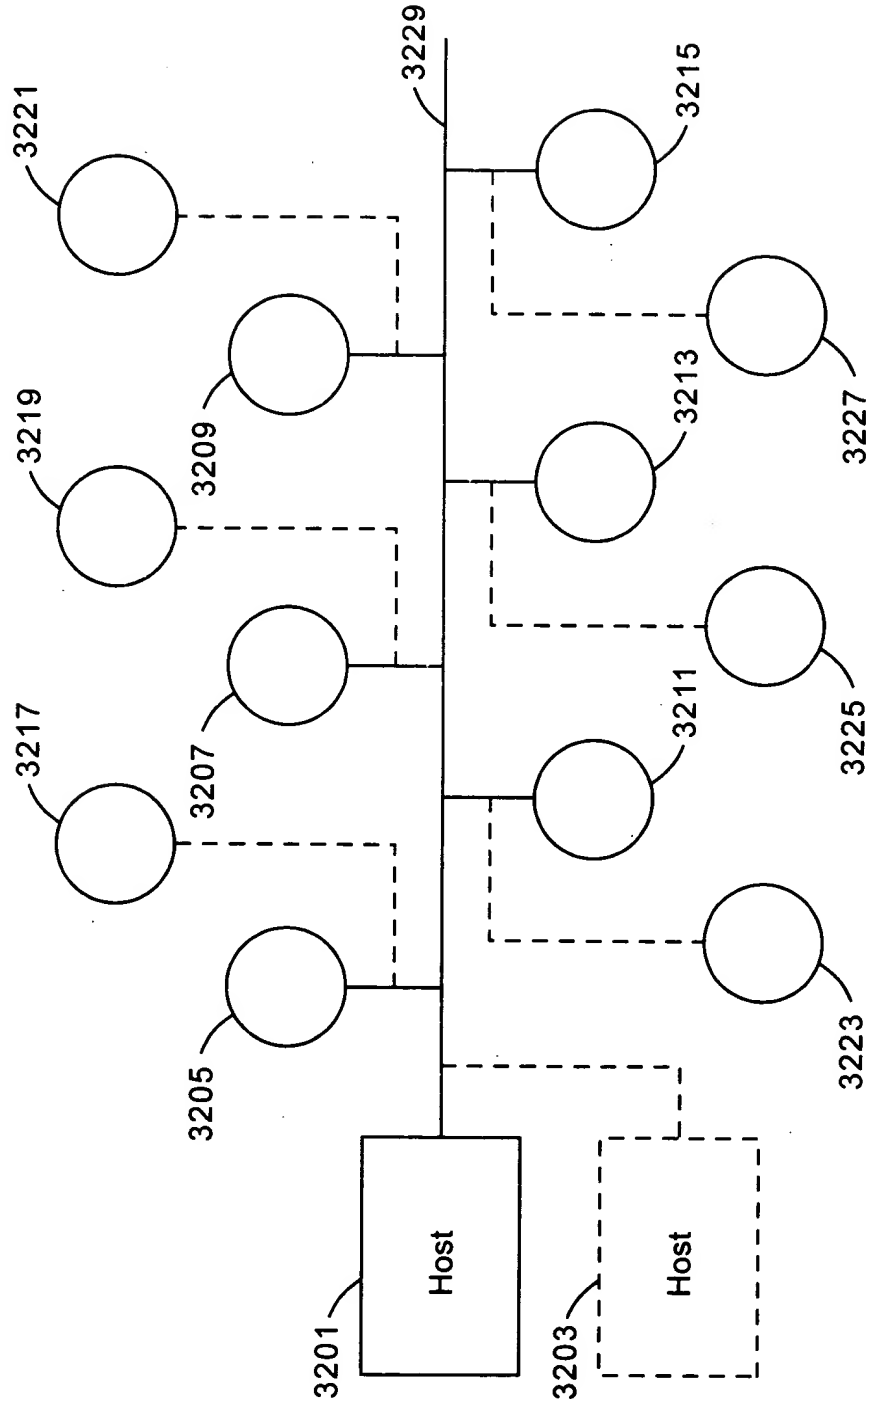 


Fig.21

 
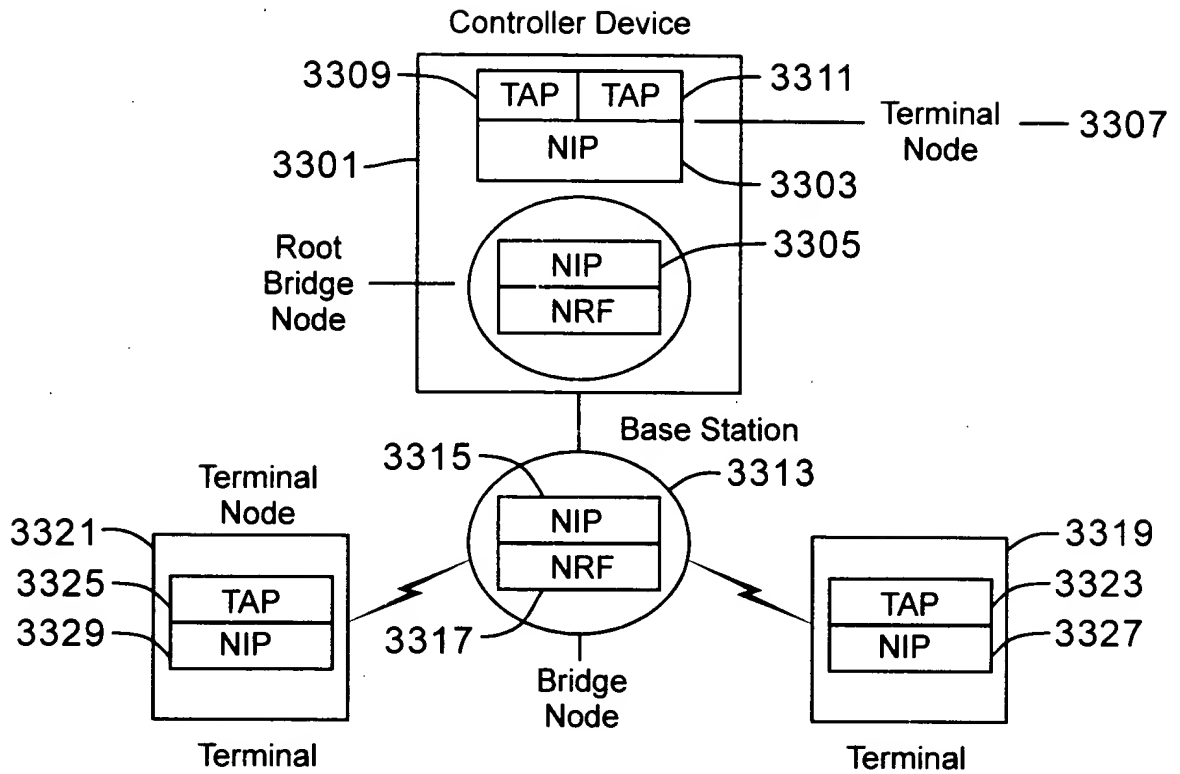 


Fig. 22

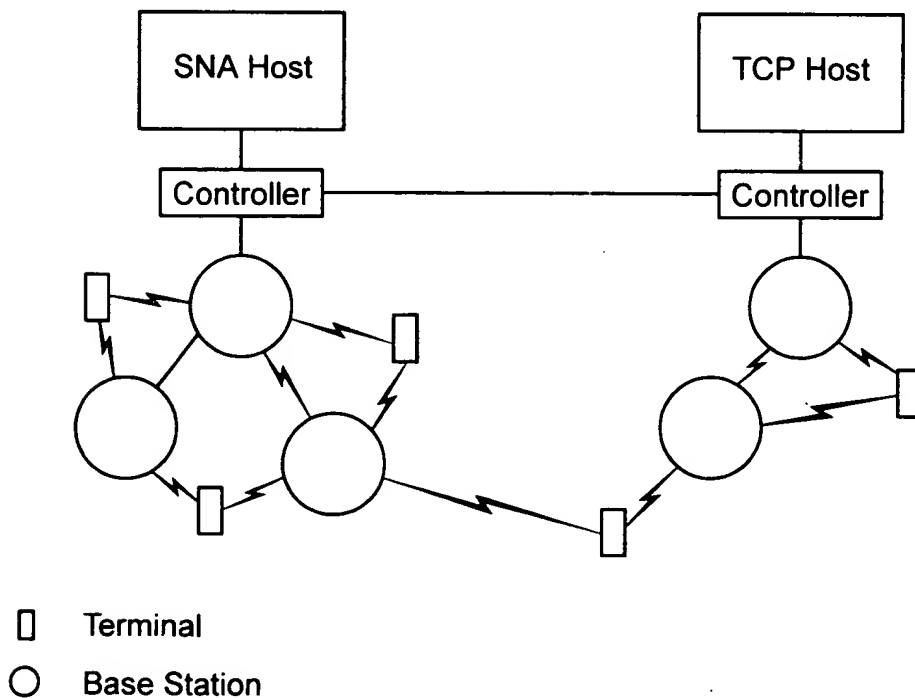

□ Terminal
○ Base Station

Fig. 23

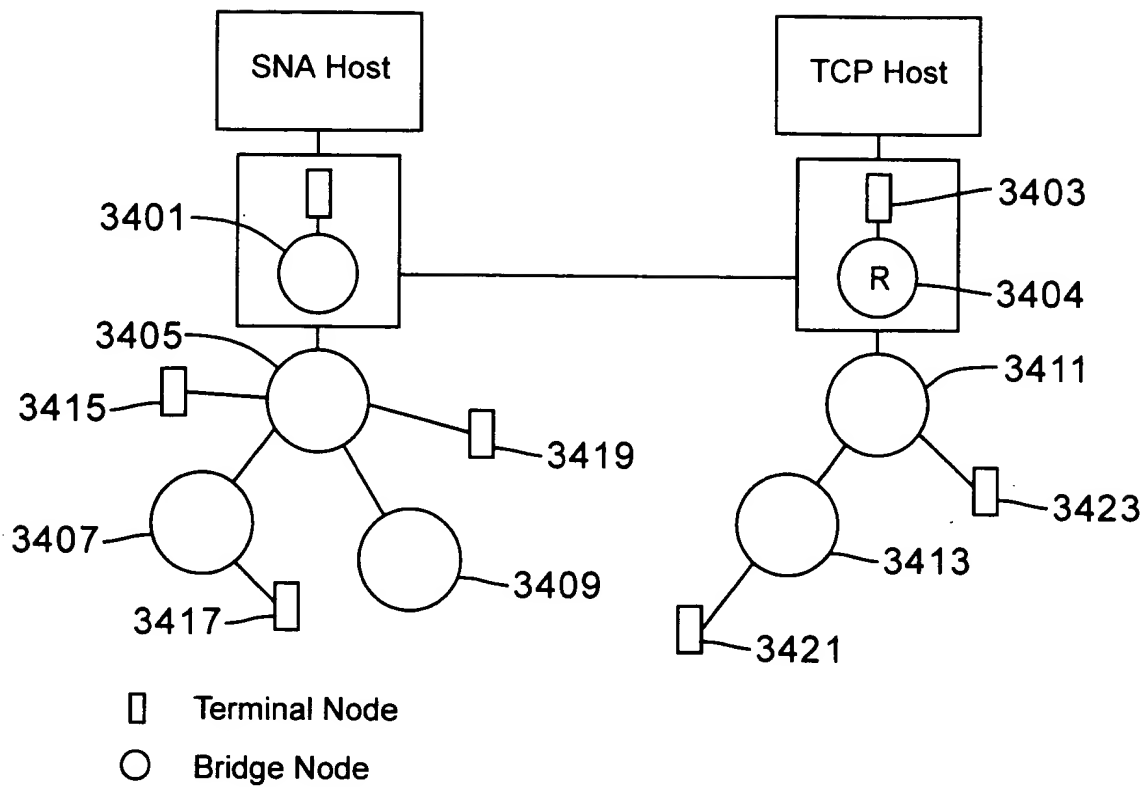 


Fig. 24

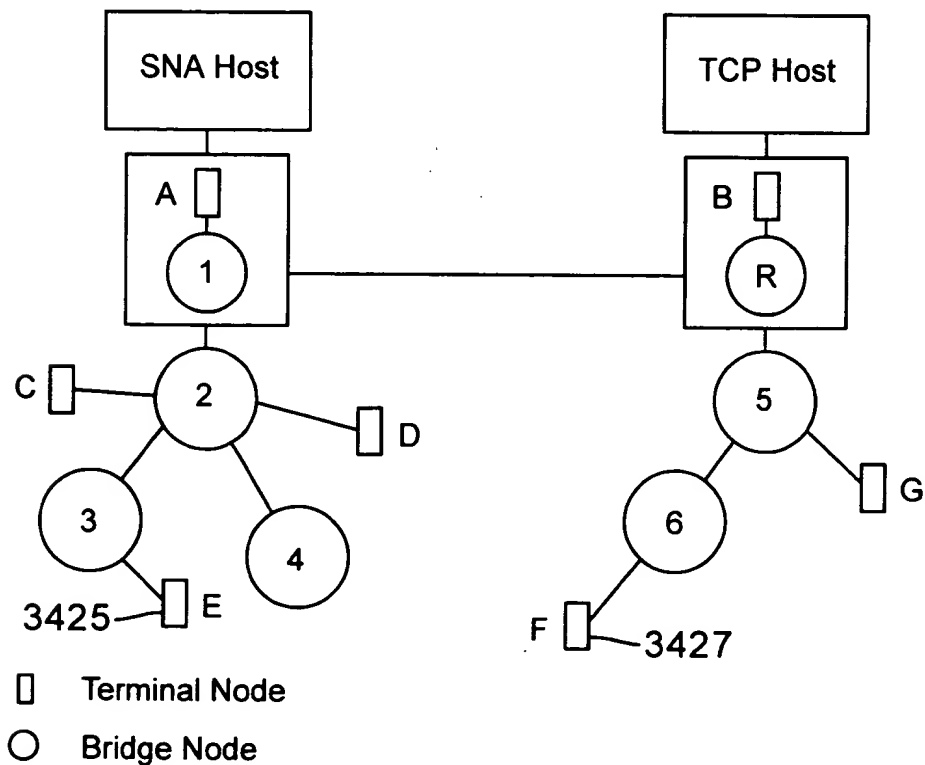 


Fig. 25

00218660-052590

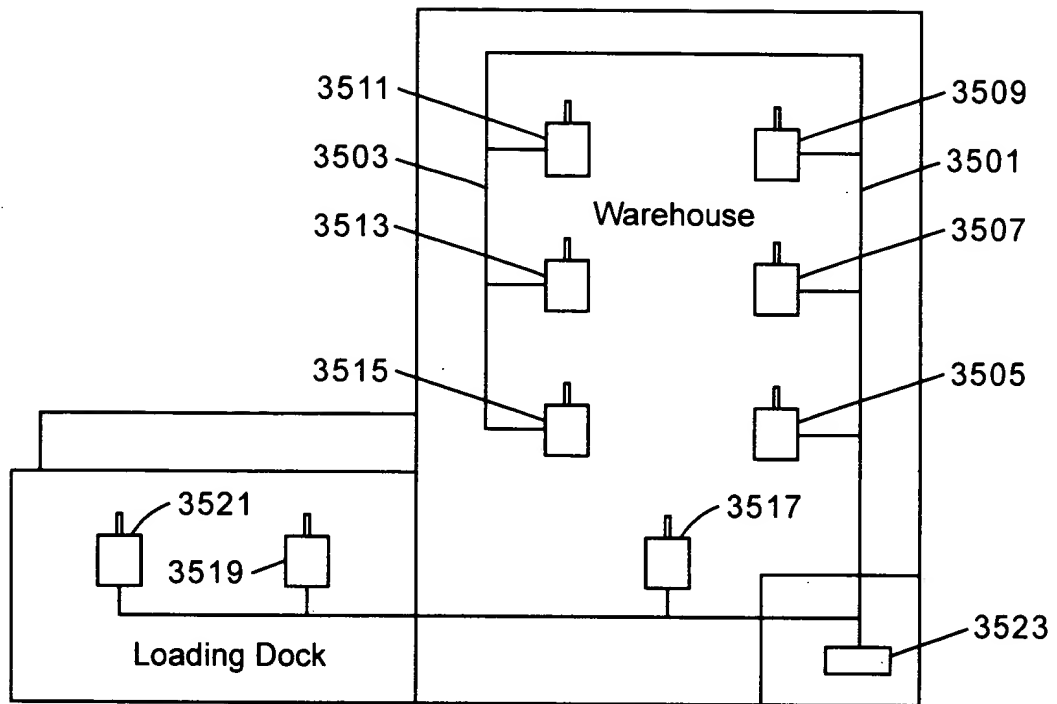 


Fig. 26

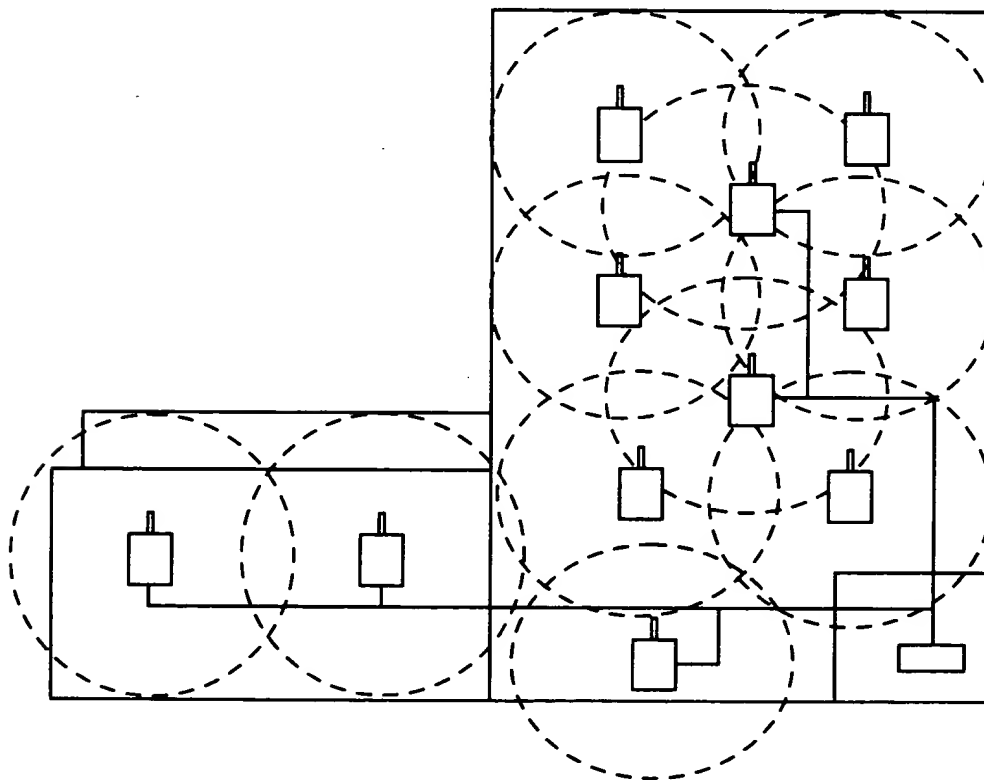 


Fig. 27

09313660 "B" 89937E60

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

 
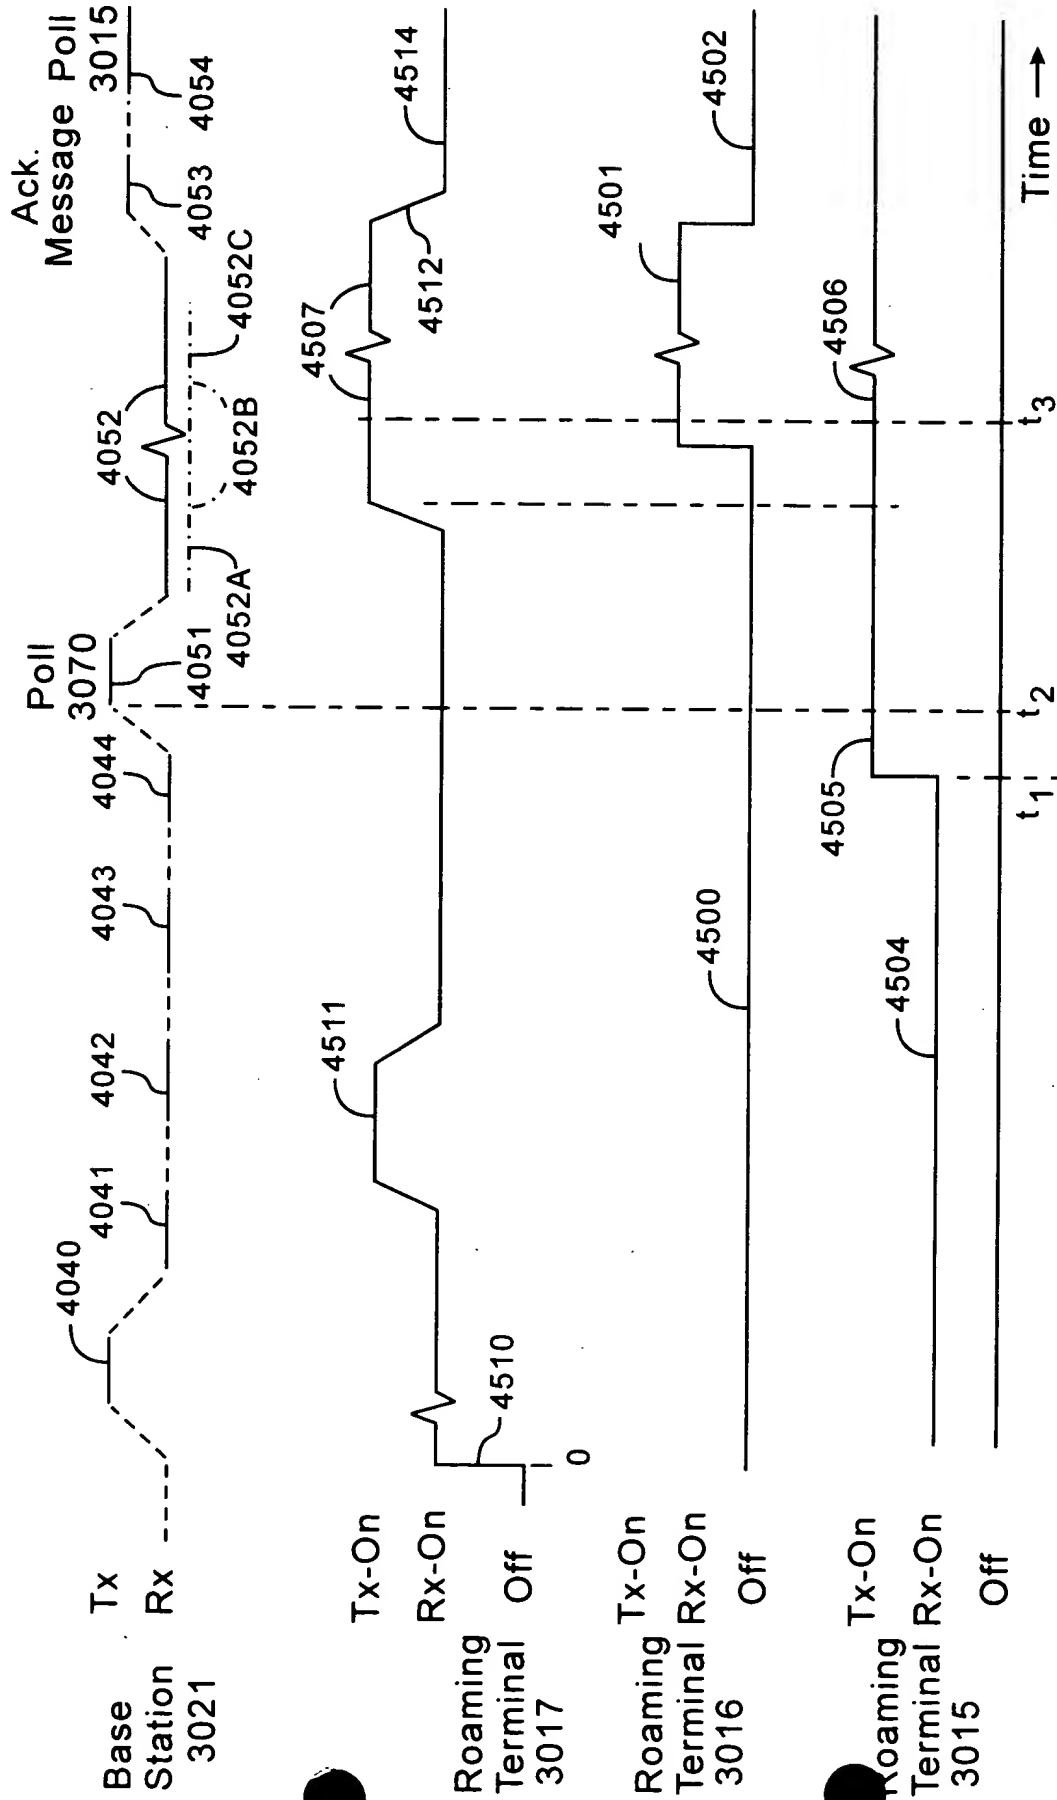 


Fig.28

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

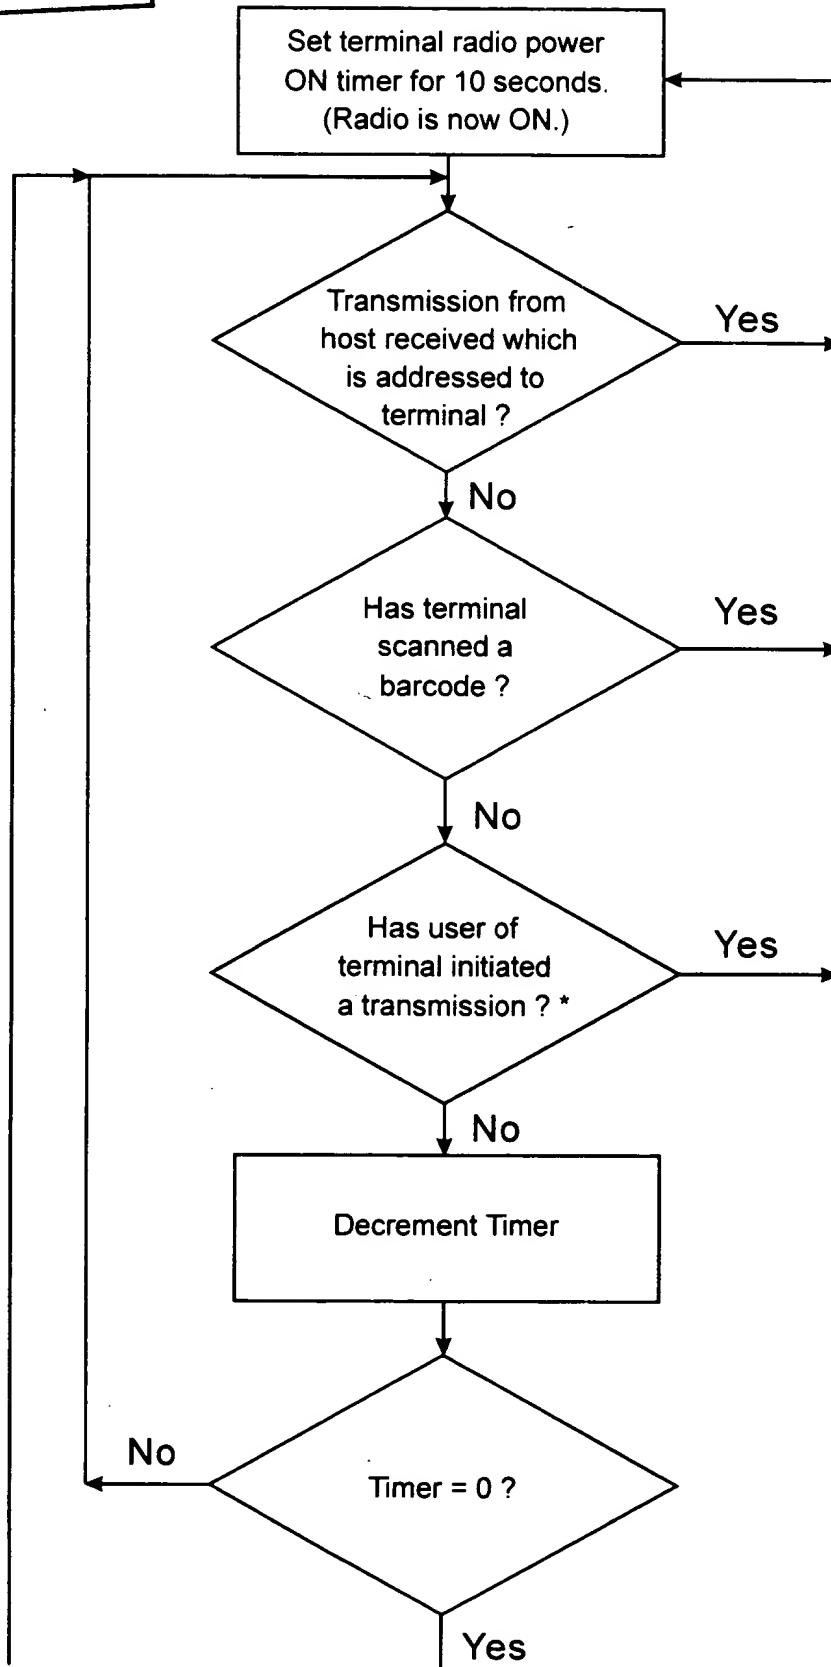

* The user of the terminal initiates a transmission by pressing the 'ENTER' or, depending on the specific software version, any of the function keys. Pressing these keys causes the terminal to power up the radio and send any data entered by the user.

Fig.29

09318668-05590
065250 " 8998TE60

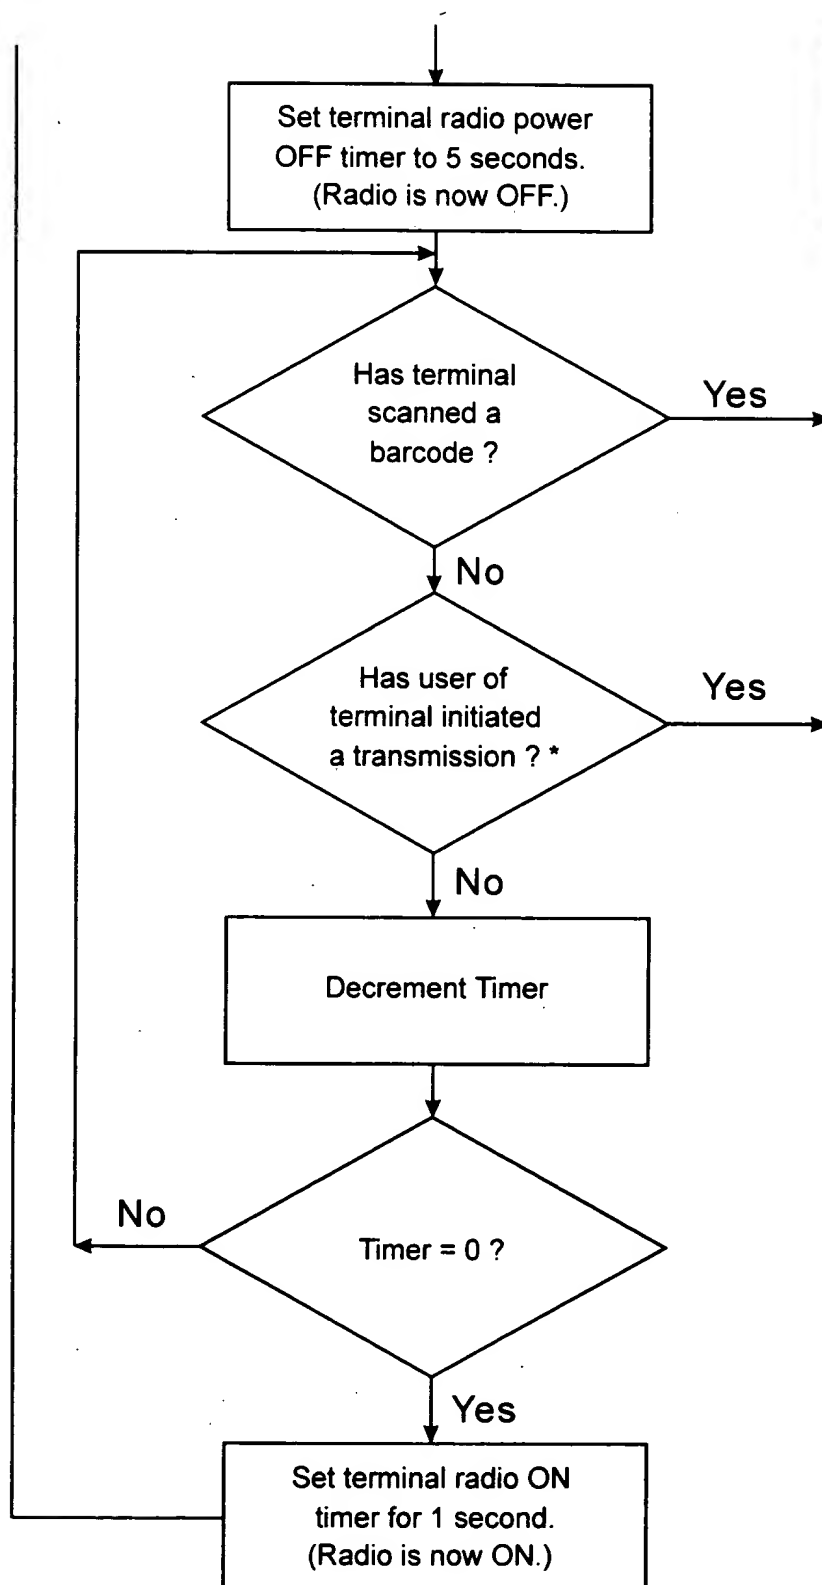 


Fig.30